



# Safety First... and Fast!

Get Same-Day Dispatch on Some of Our Most Popular Products with the Fisher Scientific Edge Program



Safety

Protecting What Matters Most

 **fisher scientific**  
part of Thermo Fisher Scientific

# Product Content

Gloves ..... 3 - 9

Respirators ..... 10 - 21

Eye, Face and Head  
Protection ..... 22 - 31

Hearing Protection ..... 32 - 35

Apparel ..... 36 - 42

Facility Safety and  
Maintenance ..... 43 - 50





Protective disposable gloves provide protection for the wearer against environmental hazards and/or protect healthcare personnel and patients from infections. The Fisher range of disposable gloves offers a variety of choices depending on your application.

## Key Selection Criteria

Here are the top selection criteria to consider:

### Testing and Labelling

Compliance to essential regulatory standards can be found in the manufacturers' specifications. Consider a glove's personal protective properties and be aware that multiple gloves may be needed to satisfy all workplace requirements.

| Summary key test data for protective gloves |                                                                                                                                          |        |            |             |
|---------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|--------|------------|-------------|
| Personal and product safety                 |                                                                                                                                          | People | Production |             |
| Regulation/Norm                             | Testing/Documentation                                                                                                                    |        | Sterile    | Non-sterile |
| (EU) 2016/425                               | PPE Regulations (Declaration of Conformity)                                                                                              | x      |            |             |
| EN420                                       | Protective gloves - general requirements and test methods                                                                                | x      |            |             |
| EN ISO 374-1                                | Protective gloves against dangerous chemicals and micro-organisms - Part 1: Terminology and performance requirements for chemical risks  | x      |            |             |
| EN ISO 374-5                                | Protective gloves against dangerous chemicals and micro-organisms - Part 5: Terminology and performance requirements for micro-organisms | x      | x          | x           |

### Material

The most commonly used raw materials for the production of disposable gloves are Natural Rubber latex (NR gloves), Nitrile Butadien Rubber (NBR gloves) and Poly Vinyl Chloride (PVC) gloves.

| Material                                                              | Material properties                                                                                                                                             |
|-----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Vinyl/PVC                                                             | Low tensile strength and elongation. Reduced flexibility and ergonomics. High non-volatile residues. Wet particle counts.                                       |
| Natural Rubber Latex                                                  | Superior tensile strength and good elastic properties. Low in particles and ionic extractables. Risk of allergic reactions.                                     |
| Synthetic Latex: e.g. Nitrile, Neoprene, Polychloroprene, Polystyrene | Good elongation and tear resistance. Superior abrasion resistance. Very low ionic and particle residues. No latex proteins, reduced risk of allergic reactions. |

### Performance

Key performance factors to be considered are durability, strength and barrier protection, along with dexterity, size, length and overall wearing comfort.

### Sterility

Non-sterile gloves are mainly used for hygienic purposes or for self-protection, whereas sterile gloves are used for sterile procedures in hospitals or laboratories, where contamination of patients and/or handled materials must be avoided.

### Protection against Mechanical and Thermal Hazards

Depending on your application also consider a glove's mechanical and thermal protective properties. Mechanical safety gloves are tested according to standard EN388:2016 for resistance to abrasion, cut, tear and puncture. For applications involving heat the European standard DIN EN 407 regulates the requirements for protective safety gloves. For applications requiring protection from cold minimum requirements for safety gloves are regulated in standard DIN EN 511.



# Gloves

**Ansell™**

## AlphaTec™ 02-100 Chemical Resistant, 5 Layer Laminated Gloves



- Provide flexibility and tactility
- Made from an exceptionally thin chemical-resistant, five-layer laminated film
- Integral, nonwoven liner helps absorb and dissipate perspiration for a cooler, more comfortable fit
- Can be worn as liners under heavier nitrile, neoprene, or PVC gloves

Laminated gloves provide extreme resistance against a wide range of chemicals, including biological hazards.

| Cat. No. | Size | Pack qty |
|----------|------|----------|
| 12689781 | 6    | 12PR     |
| 12313609 | 7    | 12PR     |
| 11517853 | 8    | 12PR     |
| 12333609 | 9    | 12PR     |
| 12343609 | 10   | 12PR     |
| 15399622 | 11   | 12PR     |

**Ansell™**

## TouchNTuff™ Disposable Chemical Resistant Nitrile Gloves



- Made from 100% nitrile
- Resistant to nuisance punctures, nicks, cuts and abrasions
- Comfortable thin mil construction
- Rolled cuffs for easy donning and doffing

Soft nitrile disposable gloves provide high levels of comfort and splash resistance against hazardous chemicals.

| Cat. No. | Size    | Pack qty |
|----------|---------|----------|
| 11706714 | Small   | 100      |
| 11716584 | Medium  | 100      |
| 11726584 | Large   | 100      |
| 11786584 | X-Large | 100      |

**Ansell™**

## AlphaTec™ 87-118 Extra Heavyweight Latex Gloves with Flocked Lining



- High resistance to water based chemicals
- Beaded cuff for easy donning/doffing
- Extended cuff length for abrasion/tear resistance
- Diamond grip pattern

Latex gloves are flexible and provide resistance to water-based chemicals. The extended cuff length prevents droplets from traveling beyond the glove and onto the skin.

| Cat. No. | Size | Pack qty |
|----------|------|----------|
| 15980137 | 6.5  | 12PR     |
| 15990137 | 7.5  | 12PR     |
| 15900147 | 8.5  | 12PR     |
| 15910147 | 9.5  | 12PR     |
| 15920147 | 10.5 | 12PR     |

**Ansell™**

## Solvex™ 37-900 Series Red Nitrile Immersion Gloves



- Out-performs all existing nitriles in permeation tests
- Every glove individually air-pressure tested
- Every glove subjected to a leakproof test
- ISO 9001 certified

Offers greater strength and superior chemical resistance. Ansell™ Solvex™ 37-900 Series Red Nitrile Immersion Gloves set new standards for mechanical performance, with unrivalled abrasion and puncture resistance - almost twice that of the current leading nitrile.

| Cat. No. | Size | Pack qty |
|----------|------|----------|
| 11781583 | 7    | 12PR     |
| 12495160 | 8    | 12PR     |
| 11761583 | 9    | 12PR     |
| 12415170 | 10   | 12PR     |
| 12425170 | 11   | 12PR     |

**Ansell**

Providing Multi-Hazard  
Hand Protection

[Learn More](#)



## Ansell™

### NeoTouch™ 25-101 Series Bright Green Neoprene Gloves



- Polyurethane inner coating for easy donning
- Textured fingertips provide a secure grip
- Beaded cuff for secure hold
- Green color

With a latex-free formulation, NeoTouch™ gloves are appropriate for the prevention of Type I allergies. Because they're powder-free, they also limit the risk of dermatitis for the wearer. They provide excellent resistance to acids, bases and alcohols.

| Cat. No. | Size | Pack qty |
|----------|------|----------|
| 11722125 | 7    | 100      |
| 11761573 | 8    | 100      |
| 11771573 | 9    | 100      |
| 11781573 | 10   | 100      |

## Ansell™

### Solvex™ 37-675 Series Green Nitrile Immersion Gloves



- Reversed lozenge finish further enhances levels of grip.
- Longer length (38cm) than standard, extending protection to the wrist and lower forearm area
- Flocked lining and flexible nitrile file offer exceptional comfort
- Gauntlet style

Designed to deliver optimal results in wet or dry work environments where chemical resistance is crucial. Fully reusable, with an unequaled abrasion resistance, it provides superb comfort for the wearer.

| Cat. No. | Size | Pack qty |
|----------|------|----------|
| 12630862 | 6    | 12PR     |
| 11796554 | 8    | 12PR     |
| 11786554 | 9    | 12PR     |
| 12405140 | 10   | 12PR     |
| 12201202 | 11   | 12PR     |

## Kimberly-Clark™

### Kimtech™ Prizm™ Multi Layered Gloves, 24 cm, Ambidextrous, Dark Violet/Dark Magenta



- Seamlessly protect people and processes when and where it counts with the trusted Kimtech™ brand
- Designed for scientists by scientists, Kimtech™ Prizm™ neoprene nitrile gloves provide an unparalleled combination of precision, protection and comfort
- These lab gloves are thoughtfully and intuitively designed for higher risk lab environments in the biotech, non-sterile pharmaceutical, and university research fields, where science and safety must work hand-in-hand
- These protective gloves are crafted with a proprietary combination of polymers, neoprene and nitrile, proven to protect against a wide range of chemicals

Kimtech™ Prizm™ multi-layered neoprene nitrile gloves are ideal for the most demanding scientific applications. One of the thinnest Type A certified protective gloves, providing the perfect balance between precision, protection, and comfort.

| Cat. No. | Size    | Pack qty |
|----------|---------|----------|
| 17109060 | X-Small | 100      |
| 17119060 | Small   | 100      |
| 17129060 | Medium  | 100      |
| 17139060 | Large   | 100      |
| 17149060 | X-Large | 90       |

## Kimberly-Clark™

### Kimtech™ Green Nitrile Ambidextrous Gloves



- Assured Compliance:
- PPE Cat III according to Regulation (EU) 2016/425
- EN ISO 374-1:2016 Type C (K) Chemical Splash protection
- EN 374-4:2003 Resistance to degradation by chemicals

Kimtech™ Green Nitrile Ambidextrous Gloves offer superb protection with an environmentally-friendly glove thickness of just 0.06 mm. The comfortable design is powder- and latex-free and guards against a number of common contaminants.

| Cat. No. | Pack qty |
|----------|----------|
| 11749295 | 250      |



**Greener Choice Program**  
Offers You Sustainable products to Help  
You Reduce Your Environmental Footprint

[Learn More](#)



Click on a product to access a full detailed product selection

eu.fishersci.com



# Gloves

## Ansell™

### Microflex™ 63-864 Latex Gloves



- Fingertips are thicker than most standard latex gloves for the ultimate in protection.
- Enhanced, textured fingertips provide a secure, dependable grip for rugged work settings and improve dexterity for increased productivity.
- Whether the task at hand is mid-duty or heavy-duty, hands stay safe and remain dry – even in wet or dry conditions.
- Palm thickness meets and exceeds quality standards.

Prevents rips and tears with thicker than average fingertips. Ansell™ Microflex™ 63-864 Latex Gloves offer a reliable and precise grip.

| Cat. No. | Size | Pack qty |
|----------|------|----------|
| 15529451 | 6    | 100      |
| 15539451 | 7    | 100      |
| 15549451 | 8    | 100      |
| 15559451 | 9    | 100      |
| 15569451 | 10   | 100      |

## Ansell™

### Microflex™ 93-260 Chemical-Resistant Disposable Gloves



- Three layer design for superior protection against harsh chemicals including acids, solvents and bases
- Thin mil construction provides enhanced tactility and dexterity
- Extra soft material and ergonomic design for outstanding fit, feel and flexibility for longer wear time
- Lower acceptable pinhole rate (0.65 AQL) and extended cuff for reliable protection against hazardous substances

Provides thin yet tough chemical protection with unparalleled comfort. Microflex™ 93-260 Disposable Gloves have a solvent resistant exterior, an acid and base resistant middle layer and an easy donning interior layer.

| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 15623074 | X-Small  | 50       |
| 15633074 | Small    | 50       |
| 15643074 | Medium   | 50       |
| 15653074 | Large    | 50       |
| 15663074 | X-Large  | 50       |
| 15613074 | 2X-Large | 50       |

## Tempshield™

### Cryo-Gloves™ Blue Waterproof Mid-Arm Length Cryogenic Gloves



- Cryogenic protection for ultra-cold applications down to -196°C (-320°F)
- Thin, seamless 100% waterproof liner provides protection from spills and splashes
- State-of-the art materials and multi-layered construction allow for a maximum level of thermal protection, flexibility, and dexterity
- High performance, thermal lining wicks moisture away from hands to maintain comfort over extended periods of wear

A thin, seamless 100% waterproof liner provides protection from spills and splashes. State-of-the art materials and multi-layered construction provide cryogenic protection for ultra-cold applications down to -196°C (-320°F).

| Cat. No. | Size    | Pack qty |
|----------|---------|----------|
| 16092222 | Small   | 1PR      |
| 11726419 | Medium  | 1PR      |
| 10146284 | Large   | 1PR      |
| 15210126 | X-Large | 1PR      |

## Tempshield™

### Cryo-Gloves™ Waterproof Shoulder-Length Cryogenic Gloves



- Cryogenic protection for ultra-cold applications down to -196°C (-320°F)
- Thin, seamless 100% waterproof liner provides protection from spills and splashes
- State-of-the art materials and multi-layered construction allow for a maximum level of thermal protection, flexibility, and dexterity
- High performance, thermal lining wicks moisture away from hands to maintain comfort over extended periods of wear

A thin, seamless 100% waterproof liner provides protection from spills and splashes. State-of-the art materials and multi-layered construction provides cryogenic protection for ultra-cold applications down to -196°C (-320°F).

| Cat. No. | Pack qty |
|----------|----------|
| 11813821 | 1PR      |



**fisher scientific**

# Safety Starts Here

Keep your people, processes, and facilities safe.

Learn More

Safety | Protecting What Matters Most

## Ansell™

### HyFlex™ 11-318 Lightweight Uncoated Cut-Resistant Gloves



- Ultra light design with medium cut performance
  - Thin liner uncoated 18 gauge knit design with Dyneema Diamond Technology™ maintains hand at comfortable temperature
  - Snug fit on hand due to spandex reinforcement on knuckles and palm
  - Silicone free carbon fiber
- For ultra fine mechanical applications in variety of industries where mid-level performance cut resistance is needed.

| Cat. No. | Size | Pack qty |
|----------|------|----------|
| 15496160 | 6    | 12PR     |
| 15416170 | 7    | 12PR     |
| 15426170 | 8    | 12PR     |
| 15436170 | 9    | 12PR     |
| 15466170 | 10   | 12PR     |
| 15476170 | 11   | 12PR     |

## Ansell™

### Neptune™ 70-215 Series Yellow Medium Weight Gloves



- Industrial gloves
- 100% DuPont™ Kevlar™ aramid fibers glove provides light-duty cut protection
- Protection from sharp edges of metals, ceramics, glass and other materials
- Reversible design allows glove to be worn on either hand, reducing replacement costs

Constructed from high-tech para-aramid short fibers, the gloves provide improved sensitivity and fit. The seamless construction avoids irritation and the use of short fibers offer extra comfort.

| Cat. No. | Size | Pack qty |
|----------|------|----------|
| 12660972 | 7    | 12PR     |
| 12670972 | 8    | 12PR     |
| 12680972 | 9    | 12PR     |
| 12650972 | 10   | 12PR     |

## Fisherbrand™

### Acrylic Glove Box Holder



- Clear acrylic holders include a polyester foam insert to securely hold a range of glove box sizes—snug fit ensures easy removal of gloves
- All holders fit most major brands of boxes
- Mounting screws included

Keep gloves organized and ready for immediate use. Fisherbrand™ Acrylic Glove Box Holder includes a foam insert ensures a secure fit and easy dispensing.

| Cat. No. | Holds   | Pack qty |
|----------|---------|----------|
| 11897102 | 1 box   | 1        |
| 11807112 | 2 boxes | 1        |
| 11817112 | 3 boxes | 1        |

## Fisherbrand™

### Wire Glove Box Holder



- Keep gloves organized and ready for immediate use
- Free up benchtop space by mounting holders on wall for easy dispensing
- Vertical three-box holder fits most major brands of glove boxes
- Wall mounting screws included

Hold three boxes of gloves in a wall-mounted holder. Fisherbrand™ Wire Glove Box Holder helps free up benchtop space and is compatible with most major glove brands. Constructed of sturdy, epoxy-coated steel wire for an economical, easy-to-clean solution.

| Cat. No. | Pack qty |
|----------|----------|
| 11895843 | 1        |

## Ansell™ Edmont™

### Marigold™ Calorproof Molleton™ Heat Resistant Gloves



- Excellent abrasion resistance
- Good resistance to cuts and punctures
- Remains flexible in contact with heat
- Cow split leather treated against heat

Provides good resistance to burning and small splashes of molten metal. Ansell™ Edmont™ Marigold™ Calorproof Molleton™ Heat Resistant Gloves allow contact with heated surfaces up to 100°C.

| Cat. No. | Pack qty |
|----------|----------|
| 12990895 | 1PR      |

## PURUS™

### PureTouch™ Full-Finger Nylon Glove Liners



- For use under any type of exam glove such as latex, nitrile, or PVC
- Low-linting, 100% 15 denier nylon composition
- Sturdy and launderable for reuse
- Basic weight: 21.5 g/pair ± 10%

Ergonomically designed liners are constructed of 100% low-linting nylon to provide comfort and protection when worn under PVC, latex, or nitrile gloves.

| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 15797029 | Small    | 300PR    |
| 15978910 | Small    | 20PR     |
| 15787029 | Medium   | 300PR    |
| 15968910 | Medium   | 20PR     |
| 15777029 | Large    | 300PR    |
| 15958910 | Large    | 20PR     |
| 15707039 | X-Large  | 300PR    |
| 15988910 | X-Large  | 20PR     |
| 15874084 | 2X-Large | 300PR    |
| 15998910 | 2X-Large | 20PR     |



# Gloves

## Fisherbrand™

### Extended Cuff Nitrile Gloves

- Powder free
  - Fully textured finish for a superior wet or dry grip
  - Ambidextrous and non-sterile with beaded cuff
  - Tested for use with chemotherapy drug exposure
- Choose a glove with exceptional durability and added protection. The Fisherbrand™ Extended Cuff Nitrile Gloves are extra-thick, fully textured for a superior grip and are tested for use with chemotherapy drug exposure.



| Cat. No. | Size    | Pack qty |
|----------|---------|----------|
| 15662357 | Small   | 50       |
| 15672357 | Medium  | 50       |
| 15682357 | Large   | 50       |
| 15692357 | X-Large | 50       |
| 15612367 | X-Small | 50       |

## Kimberly-Clark™

### Kimtech™ Opal™ Nitrile Gloves

- Kimtech™ Opal™ nitrile gloves guard against contamination by chemical splash and micro-organism hazards, delivering seamless protection when and where it counts.
- The powder-free gloves are ideal for use in research and production facilities, life sciences and non-sterile drug manufacturing applications.
- The gloves feature an innovative approach using a thin nitrile polymer with a tip thickness of just 0.07 mm, but with excellent tensile strength suitable for rigorous process use.
- Easy to don, soft and comfortable Kimtech™ Opal™ nitrile gloves are suitable for extended wearing time.



These powder free, ambidextrous Kimtech™ Opal™ Nitrile Gloves with beaded cuff and textured fingertips guard against contamination by chemical splash and micro-organism hazards while reducing the risk of TYPE I and IV glove-associated skin reactions.

| Cat. No. | Size    | Pack qty |
|----------|---------|----------|
| 17367659 | X-Small | 200      |
| 17377659 | Small   | 200      |
| 17387659 | Medium  | 200      |
| 17397659 | Large   | 200      |
| 17307669 | X-Large | 170      |

## Kimberly-Clark™

### Kimtech™ Green Nitrile Ambidextrous Gloves

- Assured Compliance:
- PPE Cat III according to Regulation (EU) 2016/425
- EN ISO 374-1:2016 Type C (K) Chemical Splash protection
- EN 374-4:2003 Resistance to degradation by chemicals

Kimtech™ Green Nitrile Ambidextrous Gloves offer superb protection with an environmentally-friendly glove thickness of just 0.06 mm. The comfortable design is powder- and latex-free and guards against a number of common contaminants.



| Cat. No. | Size    | Length | Pack qty |
|----------|---------|--------|----------|
| 11719295 | X-Small | 244 mm | 250      |
| 11729295 | Small   | 244 mm | 250      |
| 11739295 | Medium  | 244 mm | 250      |
| 11759295 | X-Large | 255 mm | 225      |

## Kimberly-Clark™

### Kimtech™ Purple Nitrile™ Ambidextrous Gloves

- PPE Cat III according to Regulation (EU) 2016/425
- EN ISO 374-1:2016 Type B (JKT) Chemical Splash protection
- EN 374-4:2003 Resistance to degradation by chemicals



Offering the highest protection of all Kimtech™ gloves, Purple Nitrile™ gloves are latex-, silicone and powder-free. Textured fingertips and beaded cuffs ensure strength and sensitivity, and the gloves are also anti-static and food contact approved.

| Cat. No. | Size    | Pack qty |
|----------|---------|----------|
| 10737655 | X-Small | 100      |
| 10248264 | Small   | 100      |
| 11889610 | Medium  | 100      |
| 11899610 | Large   | 100      |
| 11809620 | X-Large | 90       |

## Ansell™

### Microflex™ Heavy-duty Disposable Nitrile Gloves

- Offers an advanced barrier protection against contaminants
- Non-stick properties are built into the glove formulation to create a resistance to tape or adhesives
- Textured fingers ensure strong, efficient grip and maximum worker protection
- Polymer coating assures easy donning to help protect workers in fast-paced environments



Provides protection while assisting workers with improved efficiency and speed. Ansell™ Microflex™ Heavy-duty Disposable Nitrile Gloves resist tape and adhesives with a low pinhole acceptance rate of 0.65 AQL.

| Cat. No. | Size    | Pack qty |
|----------|---------|----------|
| 15299363 | X-Small | 100      |
| 15279363 | Small   | 100      |
| 15259363 | Large   | 100      |
| 15289363 | X-Large | 100      |

## Ansell™

### Microflex™ 93-833 (Xceed) Ergonomic Nitrile Exam Gloves

- Designed to reduce hand fatigue and help workers be more productive while exerting less muscle effort
- Comfortable and lightweight
- Advanced proprietary nitrile formulation delivers an increased tactile sensitivity
- Up to 60% stronger than leading nitrile brands and up to 90% stronger than leading latex brands



Reduces hand fatigue often associated with Carpal Tunnel Syndrome. Ansell™ Microflex™ Ergonomic Nitrile Exam Gloves are lightweight and thin, yet provide reliable durability and protection.

| Cat. No. | Size   | Pack qty |
|----------|--------|----------|
| 15289373 | 5.5/6  | 250      |
| 15269373 | 6.5/7  | 250      |
| 15259373 | 7.5/8  | 250      |
| 15249373 | 8.5/9  | 250      |
| 15279373 | 9.5/10 | 230      |



## Semperit™

### Semperguard™ Comfort Latex Examination Gloves

- Made of natural latex
- Skin-friendly
- Powder-free
- Excellent elasticity and good tactility/ wearing comfort

Semperguard™ Comfort Latex Examination Gloves are powder-free and provide excellent elasticity and are very comfortable to wear.



| Cat. No. | Size    | Pack qty |
|----------|---------|----------|
| 15303884 | Small   | 100      |
| 15393874 | Medium  | 100      |
| 15383874 | Large   | 100      |
| 15313884 | X-Large | 90       |

## SHOWA™

### 6110PF Biodegradable Nitrile Disposable Gloves

- Green gloves are 100% biodegradable
- Ergonomic design for second skin feel
- Decreased risk of allergies
- Category III, EN 374 approved

Crafted with SHOWA's revolutionary Eco Best Technology™ (EBT), biodegradable gloves are powder free and provide comfort, dexterity and performance across a broad range of applications.



| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 16223142 | X-Small  | 100      |
| 16203142 | Small    | 100      |
| 16293132 | Medium   | 100      |
| 16283132 | Large    | 100      |
| 16213142 | X-Large  | 100      |
| 16233142 | 2X-Large | 100      |

## Ansell™

### MICROFLEX™ NeoTouch™ 25-201 Neoprene Gloves

- Neoprene formulation
- Textured fingertips provide a secure grip in wet and dry environments
- Chemical splash resistance to most acids and alcohols
- Polymer coated for easy donning

Neoprene gloves with an extended cuff offers expanded chemical splash protection over the wrist and forearm.



| Cat. No. | Size    | Pack qty |
|----------|---------|----------|
| 12415070 | Small   | 100      |
| 11791573 | Medium  | 100      |
| 12435070 | Large   | 100      |
| 11741583 | X-Large | 100      |

## Ansell™

### Solvex™ 37-675 Series Green Nitrile Immersion Gloves

- Reversed lozenge finish further enhances levels of grip.
- Longer length (38cm) than standard, extending protection to the wrist and lower forearm area
- Flocked lining and flexible nitrile file offer exceptional comfort
- Gauntlet style

Designed to deliver optimal results in wet or dry work environments where chemical resistance is crucial. Fully reusable, with an unequaled abrasion resistance, it provides superb comfort for the wearer.



| Cat. No. | Pack qty |
|----------|----------|
| 11706564 | 12PR     |

## Fisherbrand™

### Nitrile Indigo Disposable Gloves PPE Cat III

- PPE Category III
- Indigo blue color
- Nitrile
- Ambidextrous

Fisherbrand™ non-sterile, non-powdered gloves offer excellent protection for a wide range of applications and general use, while the textured fingertips provide good grip.



| Cat. No. | Size    | Pack qty |
|----------|---------|----------|
| 17172182 | Large   | 200      |
| 17182182 | Medium  | 200      |
| 17192182 | Small   | 200      |
| 17102192 | X-Large | 200      |
| 17112192 | X-Small | 200      |

## Ansell™

### Microflex™ Heavy-duty Disposable Nitrile Gloves

- Offers an advanced barrier protection against contaminants
- Non-stick properties are built into the glove formulation to create a resistance to tape or adhesives
- Textured fingers ensure strong, efficient grip and maximum worker protection
- Polymer coating assures easy donning to help protect workers in fast-paced environments

Provides protection while assisting workers with improved efficiency and speed. Ansell™ Microflex™ Heavy-duty Disposable Nitrile Gloves resist tape and adhesives with a low pinhole acceptance rate of 0.65 AQL.






| Cat. No. | Pack qty |
|----------|----------|
| 15269363 | 100      |



# RESPIRATORS



The Fisher Scientific channel offers a wide range of disposable respirators, reusable half and full-face masks and powered and supplied air respirators for protection against gases, vapours and particulates. You can choose the protection level, comfort, and maintenance requirements you need to work safely and comfortably. Our respiratory offering further includes numerous spare filters, respirator hoods and helmets, masks, fit-testing, cleaning and storage accessories.

| Respiratory Product Categories                                                                                            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Disposable Respiratory</b></p>     | <ul style="list-style-type: none"> <li>• Ideal for many industries and applications where workers require particulate protection e.g. dusts and mists</li> <li>• A choice of cup shape or flat-fold, valved or unvalved and also the option to protect against ozone and nuisance levels of organic vapours and acid gases</li> <li>• Lightweight, maintenance-free, comfortable, convenient and easy to use</li> </ul>                                                                                                                                      |
| <p><b>Reusable Respiratory</b></p>      | <ul style="list-style-type: none"> <li>• Offer protection against particulates, gases and vapours or a combination of these</li> <li>• Feature replaceable or integrated filters. Many models are fully maintainable and may be cleaned, stored and reused provided they are in good condition</li> <li>• Full-face respirators also offer integrated eye and face protection</li> <li>• Help reduce the amount of single-use equipment waste</li> </ul>                                                                                                     |
| <p><b>Powered Air Respiratory</b></p>  | <ul style="list-style-type: none"> <li>• Offer protection against dusts, mists, fumes, gases, vapours and combination hazards</li> <li>• Can offer integrated eye, face, head, neck and hearing protection in one system avoiding incompatibility issues between items of PPE.</li> <li>• Modular system allows you to mix and match items as your environments or application changes</li> <li>• Help reduce the amount of single-use equipment waste</li> <li>• No increase in breathing resistance means more comfortable and longer wear time</li> </ul> |
| <p><b>Respiratory Hoods and Helmets</b><br/> <b>Respiratory Replacement Filters and Accessories</b></p>                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |



**3M**




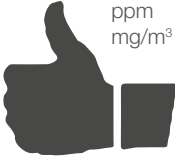
PPE to Keep You Safer

[Learn More](#)

# RESPIRATORS



## Path to Protection in Four Steps

|   |                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---|---------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 |  <p>ppm<br/>mg/m<sup>3</sup></p>   | <p><b>Identify the Hazards</b></p> <p>Whether the construction or other industry, each sector has its own risks and dangers. The first step is to identify them. Is the worker exposed to particulate matter or dangerous gases and vapours? Make a list of all the risks regarding respiratory protection.</p>                                                                                                                                                     |
| 2 |  <p>ppm<br/>mg/m<sup>3</sup></p>   | <p><b>Assess the Risk</b></p> <p>Then evaluate all respiratory related risks. What is the probability of each risk? How many employees are at risk and what are the consequences? By evaluating each risk and danger, you can prioritise its prevention. Consider other protection, e.g. skin, eye, face, head and body.</p>                                                                                                                                        |
| 3 |                                   | <p><b>Select the right respirator</b></p> <p>Now that you know the risks and dangers that can impact your staff, you can choose the appropriate masks and systems. There is a wide range of disposable and reusable masks and respiratory protection systems.</p> <p>In addition to protection, there are also two other important factors that may determine your choice. These are comfort and efficiency. Check for such features in premium range products.</p> |
| 4 |  <p>ppm<br/>mg/m<sup>3</sup></p> | <p><b>Train in Fitting and Use</b></p> <p>Respiratory protection is personal. Because each job entails its own risks, every workplace is different. Make sure you know how to use and maintain your RPE to ensure effective respiratory protection.</p>                                                                                                                                                                                                             |

## Respirator Fit Testing

Do you have workers who wear tight fitting respirators such as disposable, half mask or full-face masks (including those fitted to a powered respirator)? If so, you are required to fit test them using qualitative or quantitative test methods for disposable and half-masks (included those fitted to a powered or supplied air device), and only quantitative methods for full face masks (included those fitted to a powered or supplied air device).



# Respirators

3M™

## D3000 Secure Click™ Series Particulate Filters

- New dual flow cartridges and filters allow for easier breathing
  - Protects against particulates with optional nuisance level organic vapour/acid gas relief
  - Quick, simple connection. Simply align the connections and push until you hear a click
  - Use with 3M™ Secure Click™ Reusable Respirators 800 Series
- 3M™ D3000 Secure Click™ Series Particulate Filters are CE approved for environments containing certain particles.



| Cat. No. | Filter Type    | Pack qty |
|----------|----------------|----------|
| 16406390 | P3R Nuis OV/AG | 10PR     |
| 16426390 | P3R            | 10PR     |
| 16456390 | P2R Nuis OV/AG | 10PR     |
| 16466390 | P2R            | 10PR     |

3M™

## D7900 Secure Click™ Series Particulate Filters

- New dual flow cartridges and filters allow for easier breathing
  - Protects against particulates
  - Quick, simple connection. Simply align the connections and push until you hear a click
  - Use with 3M™ Secure Click™ Reusable Respirators 800 Series
- 3M™ D7900 Secure Click™ Series Particulate Filters are approved for environments containing certain solid and liquid particles.



| Cat. No. | Filter Type | Model | Pack qty |
|----------|-------------|-------|----------|
| 17287206 | P1R         | D7915 | 20PR     |
| 17297206 | P2R         | D7935 | 20PR     |
| 17207216 | P3R         | D7925 | 20PR     |

3M™

## D8000 Secure Click™ Series Gas, Vapour, and Particulate Filters

- New dual flow cartridges and filters allow for easier breathing
  - Protects against certain organic vapours with a boiling point above 65°C
  - Quick, simple cartridge connection. Simply align the connections and push until you hear a click
  - Use with 3M™ Secure Click™ Reusable Respirators 800 Series
- 3M™ D8000 Secure Click™ Series Gas, Vapour, and Particulate Filters feature dual flow cartridges and filters that allow for easier breathing.



| Cat. No. | Filter Type           | Pack qty |
|----------|-----------------------|----------|
| 16466360 | A1 Cartridge          | 4PR      |
| 16476360 | A1B1E1K1 Cartridge    | 4PR      |
| 16486360 | A2 Cartridge          | 4PR      |
| 16496360 | A2P3R Cartridge       | 4PR      |
| 16406370 | A1B1E1K1P3R Cartridge | 4PR      |

3M™

## 5000 Series Particulate Filters

- Combines with the 6000 Series Gas Vapor cartridges to provide particulate and gas/vapor protection
- 3M 501 filter retainers needed to combine the 5000 and 6000 series



Provides excellent particulate protection in the laboratory. 3M™ 5000 Series Particulate Filters are available in a range of protection levels.

| Cat. No. | Filter Type | Pack qty |
|----------|-------------|----------|
| 15709017 | P1 R        | 15PR     |
| 15729017 | P3 R        | 10PR     |

3M™

## 6000 Series Cartridge Filters

- Trapezoidal-shaped gas and vapor filters combine excellent protection with superb comfort and balance
- Lightweight, low breathing resistance, and well balanced when fitted to appropriate mask
- Provides excellent field of vision as a result of the unique trapezoidal shape.
- Filters can be used on 3M™ Facemasks fitted with a bayonet connections system



Combines excellent protection with superb comfort and balance. The 3M Gas and Vapor Cartridge is trapezoidal shaped and works with half- and full-facemasks that have bayonet connections systems.

| Cat. No. | Model | Pack qty |
|----------|-------|----------|
| 15769007 | 6075  | 4PR      |
| 12352339 | 6059  | 4PR      |
| 15789007 | 6054  | 32PR     |
| 15799007 | 6051  | 4PR      |
| 15729067 | 6057  | 4PR      |

3M™

## 2138 P3 R Particulate Filters

- Protection against solid and liquid particles
  - Extra protection against organic and acid gases, vapours under limit, and well as ozone up to 10 x TLV
  - Additional protection against organic vapour and acid gases below OEL
  - Suitable for use with all 3M™ Reusable Half and Full Face Masks featuring the Bayonet Filter Connection System
- 3M™ Particulate Filters 2138 offer P3 R protection against solid and liquid particles, gases, and ozone



| Cat. No. | Pack qty |
|----------|----------|
| 15719007 | 10PR     |



3M™

## 5000 Series Particulate Filters

- Combines with the 6000 Series Gas Vapor cartridges to provide particulate and gas/vapor protection
- 3M 501 filter retainers needed to combine the 5000 and 6000 series

Provides excellent particulate protection in the laboratory. 3M™ 5000 Series Particulate Filters are available in a range of protection levels.

| Cat. No. | Pack qty |
|----------|----------|
| 15719017 | 10PR     |



3M™

## 2128 P2 R Particulate Filters

- 3M™ Particulate Filters 2128 offer P2 R protection against solid and liquid particles
- Extra protection against organic and acid gases, vapours, and ozone up to 10 x TLV
- Additionally protects against organic vapour and acid gases below OEL
- Suitable for use with all 3M™ Reusable Half and Full Face Masks featuring the Bayonet Filter Connection System

3M™ Particulate Filters 2128 offer P2 R protection against solid and liquid particles, vapours, as and ozone

| Cat. No. | Pack qty |
|----------|----------|
| 15739027 | 10PR     |



3M™

## 2000 Series Particulate Filters

- Lightweight particulate filters with low breathing resistance
- Bayonet-style cartridge connection for fitting to facepiece
- Filters approved to EN143:2000

Offers low breathing resistance. The 3M Particulate Filter uses bayonet-style cartridges for half- or full-facemasks.

| Cat. No. | Pack qty |
|----------|----------|
| 12322329 | 10PR     |



3M™

## 2135 P3 R Particulate Filters

- Suitable for use with all 3M™ Reusable Half and Full Face Masks featuring the Bayonet Filter Connection System
- Bayonet fitting allows filters to be clicked into place for ease of fitting

3M™ Particulate Filters 2135 offers P3 R protection against solid and liquid particles

| Cat. No. | Pack qty |
|----------|----------|
| 15709007 | 10PR     |



3M™

## 6000 Series Half Face Mask Respirator

- Bayonet Connection System allows connection to a broad range of twin lightweight filters to protect against gases, vapors, and particulates
- Twin filter design provides lower breathing resistance

These safety products must be used in accordance with OSHA regulations and the user instructions, warnings and limitations accompanying each product. Misuse may result in sickness or death.

Combines features of both reusable and disposable respirators to provide effective protection. 3M™ Half Face Mask Respirator 6000 Series are economical, low-maintenance, simple-to-handle, and extremely lightweight.

| Cat. No. | Size   | For Use With                                                                                                  | Pack qty |
|----------|--------|---------------------------------------------------------------------------------------------------------------|----------|
| 10359974 | Small  | Assembly, Cleaning, Demolition, Facility Maintenance, Grinding, Machine Operation, Painting, Sanding, Welding | 1        |
| 12332319 | Medium | Assembly, Cleaning, Demolition, Facility Maintenance, Grinding, Machine Operation, Painting, Sanding, Welding | 1        |
| 12652555 | Large  | To Protect Against Gases, Vapors and Particles in Combination with The 3 M Range of Filters                   | 1        |



3M™

## Rugged Comfort 6500 Series Quick Latch Half Facepiece Reusable Respirator

- Designed to help promote comfort, durability, and stability with a firm, lightly textured silicone face seal and strong body construction
  - Resilient silicone face seal offers an extended facepiece life, even keeping its shape in high-heat environments
  - Quick latch design eliminates the need to remove a hardhat or faceshield when lowering or raising the respirator
  - Special valve cover helps to direct exhaled breath and moisture downward
- The 3M™ Rugged Comfort Quick Latch Half Facepiece Reusable Respirator. This facepiece combines comfort, durability, and stability. The proprietary quick latch design offers an easy, one-hand touch drop-down mechanism for putting the facepiece on and/off.

| Cat. No. | Size   | Pack qty |
|----------|--------|----------|
| 15757707 | Medium | 1        |
| 15767707 | Large  | 1        |
| 15777707 | Small  | 1        |



# Respirators

3M™

## Secure Click™ Half Mask Reusable Respirator, Speaking Diaphragm



- Greater breathability and comfort provided by the world's first quad flow cartridge system
- Push button seal check helps bolster confidence that the respirator is properly sealed to the face
- Speaking diaphragm is designed to help provide easier communication while you work
- Confidence that filters and cartridges are installed properly provided by all new Secure Click™ connection

Designed with smart and intuitive features, 3M™ Secure Click™ Half Mask Reusable Respirator is simple, comfortable and reliable. Available in three sizes: small, medium, and large, our respirators all come with an optional speaking diaphragm.

| Cat. No. | Size   | Pack qty |
|----------|--------|----------|
| 16446370 | Medium | 1        |
| 16476370 | Large  | 1        |
| 16486370 | Small  | 1        |

3M™

## Maintenance Free Half Mask Respirator



- Effective and comfortable protection against organic vapor and hazardous particulates
  - A newly enhanced valve assembly helps to reduce exhalation breathing resistance for improved breathing comfort
  - Lightweight, well-balanced, low profile design
  - Integrated cartridge and filters mean it's ready to use and maintenance free
- 3M™ Maintenance Free Half Mask is a simple and ready-to-use respirator with an integrated cartridge and filters.

| Cat. No. | Model | Pack qty |
|----------|-------|----------|
| 16486350 | 4251+ | 1        |
| 16496350 | 4255+ | 1        |
| 16406360 | 4277+ | 1        |

3M™

## Maintenance Free Half Mask Respirator



- Effective and comfortable protection against organic vapour, inorganic vapours, acid gases, ammonia and hazardous particulates
  - A newly enhanced valve assembly helps to reduce exhalation breathing resistance for improved breathing comfort
  - Lightweight, well-balanced, low profile design
  - Integrated cartridge and filters mean it's ready to use and maintenance free
- 3M™ Maintenance Free Half Mask 4279+; is a simple and ready-to-use respirator with an integrated cartridge and filters.

| Cat. No. | Model | Pack qty |
|----------|-------|----------|
| 16416360 | 4279+ | 1        |

3M™

## Versaflo™ TR-630 PAPR Battery Pack



- Rechargeable or standard batteries
- Choice of NiMH, NiCd, Lithium or Lithium Ion
- Long run time for filters and cartridges These products must be used in accordance with the user instructions, warnings and limitations accompanying each product.

Choice of batteries used to provide power for PAPR systems

| Cat. No. | Pack qty |
|----------|----------|
| 15549305 | 1        |

3M™

## Versaflo™ TR-600 PAPR Accessory, Battery Charger Kit



- Charges TR-630 standard battery or TR-632 high capacity battery in less than 4 hours
- Batteries may be stored on the charger, fully charged, ready for immediate use

3M Versaflo™ TR-600 PAPR Accessory, Battery Charger Kit is used with 3M™ Versaflo™ TR-600 series air purifying device.

| Cat. No. | Model   | Product Type                       | Includes                                                | Pack qty |
|----------|---------|------------------------------------|---------------------------------------------------------|----------|
| 15509265 | TR-641E | Single Station Battery Charger Kit | TR-640 Cradle, Power Supply and Lead                    | 1        |
| 15519265 | TR-644E | Four Station Battery Charger Kit   | Four TR-640 Cradles, a Baseplate, Power Supply and Lead | 1        |

3M™

## Versaflo™ TR-600 PAPR Accessory, Filters



- Simple to install
- For use with 3M Versaflo Powered Air TR-600 series
- Recommends use of TR-6100FC filter cover to help protect filter from physical damage

3M Versaflo™ TR-600 PAPR Accessory, Filter is used with 3M™ Versaflo™ TR-600 series air purifying device.

| Cat. No. | Product Type | Model    | Pack qty |
|----------|--------------|----------|----------|
| 15779067 | Particulate  | TR-6710E | 1        |
| 15799067 | A1P Filter   | TR-6110E | 1        |
| 15709077 | ABE1P Filter | TR-6130E | 1        |
| 15719077 | A2P Filter   | TR-6310E | 1        |

3M™

## Versaflo™ S-Series Hood

- Integrated head suspension provides head, face, neck and shoulder coverage
- Protects face and eyes from liquid splash and low energy flying particles and dust (Grade F)
- Suitable for applications which require frequent replacement of the entire headtop assembly or those where there is less soiling of the outer fabric
- No assembly required



The 3M™ Versaflo™ S-Series Hood head cover with integrated head suspension provides head, face, neck and shoulder coverage as well as providing eye and face protection from liquid splash and low energy flying particles and dust.

| Cat. No. | Pack qty |
|----------|----------|
| 10357839 | 1        |

3M™

## Versaflo™ S-Series Head Cover

- Head cover with integrated head suspension providing head and face coverage
- Provides eye and face protection to EN166—liquid splash and low energy impact (grade F)—the same classification for impact resistance as safety spectacles
- Manufactured using a general purpose, cost effective fabric



| Cat. No. | Size  | Pack qty |
|----------|-------|----------|
| 11785314 | Small | 1        |
| 11775314 | Large | 1        |

3M™

## Jupiter™ Powered Air Turbo Filters

Use with the Jupiter PAPR. The 3M Jupiter™ Powered Air Turbo Filters are available in a wide selection of gas or particulate protection. Filters are to be used with the Jupiter Powered Air Turbo respirator



| Cat. No. | Pack qty |
|----------|----------|
| 10556065 | 2        |

3M™

## 6000 Series Cartridge Filters

- Trapezoidal-shaped gas and vapor filters combine excellent protection with superb comfort and balance
- Lightweight, low breathing resistance, and well balanced when fitted to appropriate mask
- Provides excellent field of vision as a result of the unique trapezoidal shape.
- Filters can be used on 3M™ Facemasks fitted with a bayonet connections system



Combines excellent protection with superb comfort and balance. The 3M Gas and Vapor Cartridge is trapezoidal shaped and works with half and full-facemasks that have bayonet connections systems.

| Cat. No. | Pack qty |
|----------|----------|
| 15759027 | 10PR     |

3M™

## Versaflo™ TR-630 PAPR Battery Pack

- Rechargeable or standard batteries
- Choice of NiMH, NiCd, Lithium or Lithium Ion
- Long run time for filters and cartridges These products must be used in accordance with the user instructions, warnings and limitations accompanying each product.



Choice of batteries used to provide power for PAPR systems

| Cat. No. | Pack qty |
|----------|----------|
| 15589255 | 1        |

3M™

## Versaflo™ TR-600 PAPR Accessory, Battery Charger Kit

- Charges TR-630 standard battery or TR-632 high capacity battery in less than 4 hours
- Batteries may be stored on the charger, fully charged, ready for immediate use



3M Versaflo™ TR-600 PAPR Accessory, Battery Charger Kit is used with 3M™ Versaflo™ TR-600 series air purifying device.

| Cat. No. | Pack qty |
|----------|----------|
| 16100841 | 1        |

3M™

## Versaflo™ TR-600 PAPR Accessory, Filter

- Simple to install
- For use with 3M Versaflo Powered Air TR-600 series
- Recommends use of TR-6100FC filter cover to help protect filter from physical damage



3M Versaflo™ TR-600 PAPR Accessory, Filter is used with 3M™ Versaflo™ TR-600 series air purifying device.

| Cat. No. | Pack qty |
|----------|----------|
| 15789067 | 1        |

3M™

## Versaflo™ TR-600 PAPR Accessory, Battery Charger Kit

- Charges TR-630 standard battery or TR-632 high capacity battery in less than 4 hours
- Batteries may be stored on the charger, fully charged, ready for immediate use



3M Versaflo™ TR-600 PAPR Accessory, Battery Charger Kit is used with 3M™ Versaflo™ TR-600 series air purifying device.

| Cat. No. | Pack qty |
|----------|----------|
| 15710058 | 1        |



# Respirators

3M™

## Versaflo™ TR-600 PAPR Accessory, Powered Air Turbo Unit, TR-602E



- Includes an Airflow Indicator (TR-971) and Spark Arrestor (TR-662 x2)
- Comfortable Airflow - Three user selectable flow rates to maximise comfort. Controlled airflow delivers steady flow as battery discharges or filter loads with particulates
- Display shows battery charge status and particulate filter loading status during use
- Charge status is also indicated by LED display on battery

For use with 3M™ Versaflo™ TR-600 series. 3M Versaflo™ TR-600 PAPR Accessory, Powered Air Turbo Unit, TR-602E includes Airflow Indicator (TR-971) and Spark Arrestor (TR-662 x2).

| Cat. No. | Pack qty |
|----------|----------|
| 15529305 | 1        |

3M™

## Versaflo™ Powered Air Turbo Starter Kit, TR-619E



- Respiratory protection against particles, gases, vapours or a combination of all three depending on filter used
- Versatile and easy-to-use
- Lightweight, balanced design
- Maximises comfort with three user selectable airflow rates

3M™ Versaflo™ Powered Air Turbo Starter Kit, TR-619E includes powered air turbo TR-602E, A2P filter, filter cover, prefilters, spark arrestors, easy clean belt, high capacity battery, single station battery charger kit, BT-30 length adjusting breathing tube and an airflow indicator.

| Cat. No. | Pack qty |
|----------|----------|
| 15559255 | 1        |

3M™

## Versaflo™ Intrinsicly Safe Powered Air Turbo TR-802E



- Approved against the latest Electrical Standards
- Easy to identify and differentiate from non-IS versions thanks to bright yellow touchpoints
- Comfort is maximised with three user selectable flow rates and controlled airflow

3M™ Versaflo™ Intrinsicly Safe Powered Air Turbo TR-802E is approved to Zone 0 requirements, making it suitable for areas where potentially explosive atmospheres are expected in normal operations.

| Cat. No. | Pack qty |
|----------|----------|
| 16416370 | 1        |

3M™

## Versaflo™ Intrinsicly Safe Powered Air Turbo Starter Kit, TR-819E



- Convenient ready-to-use kit
- Approved for use with a wide range of Versaflo™ Soft Headtops S Series and Rigid Headtops M Series
- Includes a rechargeable standard capacity lithium Ion battery
- Headtop not included

3M™ Versaflo™ Intrinsicly Safe Powered Air Turbo Starter Kit TR-819E is our ready to use kit that's approved to Zone 0 requirements and so may be suitable for areas where potentially explosive atmospheres are expected and permanent within normal operations.

| Cat. No. | Pack qty |
|----------|----------|
| 16358981 | 1        |

3M™

## Versaflo™ Intrinsicly Safe Powered Air Turbo Starter Kit, TR-819UK



- Convenient ready-to-use kit
- Approved for use with a wide range of Versaflo™ Soft Headtops S Series and Rigid Headtops M Series
- Includes a rechargeable standard capacity lithium Ion battery
- Headtop not included

3M™ Versaflo™ Intrinsicly Safe Powered Air Turbo Starter Kit TR-819UK is our ready to use kit that's approved to Zone 0 requirements and so may be suitable for areas where potentially explosive atmospheres are expected and permanent within normal operations.

| Cat. No. | Pack qty |
|----------|----------|
| 16426370 | 1        |

## CleanSpace Technology™ CleanSpace™ HALO™ System, Power Unit



- IP Rating 66 – resistant to dust and liquid ingress
  - Suitable for decontamination procedures
  - Light weight (350g), compact and comfortable
  - Long operating time: up to 9 hours and quick battery recharging: < 2hours
- Battery-powered, positive pressure air-purifying respirator with IP Rating 66. Suitable for healthcare, laboratory, pharmaceutical and emergency response. Protection in applications with particulate contaminants and biohazards as well as heavy water and decontamination procedures.

| Cat. No. | Pack qty |
|----------|----------|
| 15900102 | 1        |



**CleanSpace Technology™****CleanSpace™ HALO™ System, P3 Standard Particulate Filter**

- Used with the revolutionary CleanSpace PAPR: light weight, no hoses or belts
  - Suitable for protection against airborne particulate (dust, mists and fumes).
  - Materials: Fiberglass particulate media and plastic casing, silicone seal
  - Easy and quickly fitted and removed from the power unit
- Suitable for protection against airborne particulates (dust, mists and fumes) and biohazards.

| Cat. No. | Pack qty |
|----------|----------|
| 15980032 | 1        |

**CleanSpace Technology™****CleanSpace™ HALO™ System, CleanSpace3™ Half Mask**

- Used with the revolutionary CleanSpace HALO: light weight, no hoses or belts
  - Half masks available in 3 sizes to facilitate a good seal and a comfortable fit
  - Materials: Soft silicone cushion, nylon clips and polycarbonate (exhalation valve)
  - Mask Fit Test adaptor available for TSI Portacount™ fit testing
- Specifically designed to work to complete the CleanSpace HALO system and clip quickly onto the power units. The Half Masks are made of soft silicone that readily moulds to the face and does not cause allergic dermatitis.

| Cat. No. | Pack qty |
|----------|----------|
| 15910042 | 1        |

**CleanSpace Technology™****CleanSpace™ HALO™ System, CleanSpace3™ Half Mask**

- Used with the revolutionary CleanSpace HALO: light weight, no hoses or belts
  - Half masks available in 3 sizes to facilitate a good seal and a comfortable fit
  - Materials: Soft silicone cushion, nylon clips and polycarbonate (exhalation valve)
  - Mask Fit Test adaptor available for TSI Portacount™ fit testing
- Specifically designed to work to complete the CleanSpace HALO system and clip quickly onto the power units. The Half Masks are made of soft silicone that readily moulds to the face and does not cause allergic dermatitis.

| Cat. No. | Pack qty |
|----------|----------|
| 15990032 | 1        |

**CleanSpace Technology™****CleanSpace™ HALO™ System, CleanSpace3™ Full Face Mask**

- Used with the revolutionary CleanSpace HALO: light weight, no hoses or belts
  - Wide panoramic visor
  - Hard scratch and solvent resistant coating, Age resistant materials
  - Suitable for long periods of wear
- Compatible with CleanSpace HALO Respirators, the Full Face Masks clip quickly onto the power units and provide good panoramic vision. Inner Orinasal Masks are made of soft silicone that readily moulds to the face and does not cause allergic dermatitis.

| Cat. No. | Pack qty |
|----------|----------|
| 15920042 | 1        |

**CleanSpace Technology™****CleanSpace™ HALO™ System, CleanSpace3™ Half Mask**

- Used with the revolutionary CleanSpace HALO: light weight, no hoses or belts
  - Half masks available in 3 sizes to facilitate a good seal and a comfortable fit
  - Materials: Soft silicone cushion, nylon clips and polycarbonate (exhalation valve)
  - Mask Fit Test adaptor available for TSI Portacount™ fit testing
- Specifically designed to work to complete the CleanSpace HALO system and clip quickly onto the power units. The Half Masks are made of soft silicone that readily moulds to the face and does not cause allergic dermatitis.

| Cat. No. | Pack qty |
|----------|----------|
| 15900042 | 1        |

**CleanSpace Technology™****CleanSpace™ HALO™ System, CleanSpace3™ Full Face Mask**

- Used with the revolutionary CleanSpace HALO: light weight, no hoses or belts
  - Wide panoramic visor
  - Hard scratch and solvent resistant coating, Age resistant materials
  - Suitable for long periods of wear
- Compatible with CleanSpace HALO Respirators, the Full Face Masks clip quickly onto the power units and provide good panoramic vision. Inner Orinasal Masks are made of soft silicone that readily moulds to the face and does not cause allergic dermatitis.

| Cat. No. | Pack qty |
|----------|----------|
| 15930042 | 1        |



# Respirators

## CleanSpace Technology™

### CleanSpace™ Combined Filter

- Used with the revolutionary CleanSpace PAPP: light weight, no hoses or belts
- Materials: Fibreglass particulate media, activated carbon and plastic casing, silicone seal
- Easily fitted and removed from the power unit

Combined filter suitable for protection against airborne particulate (dust, mists, and fumes) and organic gases or vapors (boiling point > 65°C).



| Cat. No. | Pack qty |
|----------|----------|
| 15950062 | 1        |

## CleanSpace Technology™

### CleanSpace™ Combined Filter

- Used with the revolutionary CleanSpace PAPP: light weight, no hoses or belts
- Materials: Fibreglass particulate media, activated carbon and plastic casing, silicone seal
- Easily fitted and removed from the power unit

Combined filter suitable for protection against airborne particulate (dust, mists, and fumes) and organic gases or vapors (boiling point > 65°C).



| Cat. No. | Pack qty |
|----------|----------|
| 15960062 | 1        |

## CleanSpace Technology™

### CleanSpace™ ABEK1 P3 P SL R Combined Filter

- Used with the revolutionary CleanSpace PAPP: light weight, no hoses or belts
- Suitable for protection against airborne particulate (dust, mists and fumes organic, inorganic gases or vapors, ammonia and sulphur dioxide (boiling point > 65 °C)
- Materials: Fibreglass particulate media, activated carbon and plastic casing, silicone seal
- Easily fitted and removed from the power unit

The CleanSpace Combined Filter TM3 ABEK1 P SL R is suitable for protection against airborne particulate (dust, mists and fumes), organic, inorganic gases or vapours, solvents, ammonia and sulphur dioxide (boiling point >65C).



| Cat. No. | Pack qty |
|----------|----------|
| 15970062 | 1        |

## CleanSpace Technology™

### CleanSpace™ EX™ System, Power Unit

- Intrinsically safe
  - Light weight and comfortable
  - High visibility yellow casing for easy recognition
  - AirSensit System™ for mask pressure control and breath responsive airflow
- Intrinsically safe battery-powered, positive pressure air-purifying respirator (PAPP). Suitable for use in certain ignitable or potentially explosive atmospheres where there is a risk of explosion.



| Cat. No. | Pack qty |
|----------|----------|
| 15920102 | 1        |

## CleanSpace Technology™

### CleanSpace™ Combined Filter

- Used with the revolutionary CleanSpace PAPP: light weight, no hoses or belts
- Materials: Fibreglass particulate media, activated carbon and plastic casing, silicone seal
- Easily fitted and removed from the power unit

Combined filter suitable for protection against airborne particulate (dust, mists, and fumes) and organic gases or vapors (boiling point > 65°C).



| Cat. No. | Pack qty |
|----------|----------|
| 15970072 | 1        |

## CleanSpace Technology™

### CleanSpace™ Full Face Mask

- Used with the revolutionary CleanSpace™PAPP: light weight, no hoses or belts
- Wide panoramic visor
- Hard scratch and solvent resistant coating
- Suitable for long periods of wear

CleanSpace™ Full Face Mask is suitable for heavy, long term work or exposure.



| Cat. No. | Pack qty |
|----------|----------|
| 15940082 | 1        |

## CleanSpace Technology™

### CleanSpace™ Full Face Mask

- Used with the revolutionary CleanSpace™PAPP: light weight, no hoses or belts
- Wide panoramic visor
- Hard scratch and solvent resistant coating
- Suitable for long periods of wear

CleanSpace™ Full Face Mask is suitable for heavy, long term work or exposure.



| Cat. No. | Pack qty |
|----------|----------|
| 15980092 | 1        |

3M™

## Particulate Respirators

- High performance filter material ensures easy breathing
- Flexible material helps form comfortably onto a wide range of face shapes and sizes helping to give a customized fit
- Innovative contoured design engineered to help provide a more secure seal around the nose
- Adjustable colour coded braided headbands with 4-point adjustment helps to provide a more secure feel



To help improve fit to wearer's individual face shape and size. 3M™ Particulate Respirators are reusable and can be used for more than one shift.

| Cat. No. | Color Code | Pack qty |
|----------|------------|----------|
| 15688185 | Red        | 5        |
| 15678185 | Blue       | 5        |

3M™

## 8300 Series Particulate Respirator

- Tested and certified to AS/NZS 1716:2003
- Robust outer shell improves collapse resistance
- M-Noseclip adjusts easily for fewer pressure points and greater comfort on the nose
- Braided headbands improve comfort on the neck, face, and head with a secure feel



Provide comfortable, effective respiratory protection against dust particles and/or non-volatile liquid particles. The 3M 8300 Series Particulate Respirator gives effective filtration with low breathing resistance for consistent high-quality performance.

| Cat. No. | Pack qty |
|----------|----------|
| 11612999 | 10       |

3M™

## Aura™ FFP1-FFP3 Particulate Respirators

- Individually packaged to avoid contamination
- Soft cover web on inner panel ensures greater comfort
- Lightweight and foldable
- Evenly tensioned headbands to relieve strap pressure



3M™ Aura™ Particulate Respirator provides breathing protection with a flat-fold, 3-panel design, low breathing resistance and an embossed, sculpted top panel that can help reduce eyewear fogging.

| Cat. No. | Filter Type | Model           | Pack qty |
|----------|-------------|-----------------|----------|
| 10583051 | FFP2        | 9320            | 20       |
| 10116544 | FFP2        | 9322+           | 10       |
| 16684912 | FFP2        | 9322+ P2 valved | 330      |
| 12602555 | FFP3        | 9330            | 20       |
| 16523771 | FFP3        | 9332+ P3 valved | 330      |
| 11346974 | FFP3        | 9332            | 10       |
| 16674902 | FFP3        | 9330+ P3        | 440      |

Sperian™

## Honeywell™ 4000 Premium Series Respirators

- Individually packaged, single use
  - With ultra-soft hypoallergenic Willtech™ flange seal
  - With absorption properties and a tight sealing film for exceptional comfort and fit for long periods
  - Preformed and colored adjustable nose bridge
- Reduces the risk of contamination and leakage, prevents irritation and allergies and increases safety. Sperian™ Honeywell™ 4000 Premium Series Respirators are easy to store and transport.



| Cat. No. | Pack qty |
|----------|----------|
| 11831781 | 10       |

New Source™

## FFP3 Disposable Respirator Face Mask

- Polypropylene outer layers
- Fold flat
- 16689272 has exhalation valve for increased comfort
- 16679272 is without valve



FFP3 Disposable respirator to protect against inhalation of droplets and particles. Available with or without exhalation valve.

| Cat. No. | With Exhalation Valve | Pack qty |
|----------|-----------------------|----------|
| 16679272 | No                    | 20       |
| 16689272 | Yes                   | 10       |

New Source™

## FFP2 Disposable Respirator Face Mask

- Polypropylene outer layers
- Cup shaped
- 16669272 has exhalation valve for increased comfort
- 16635042 is without valve



FFP2 Disposable respirator to protect against inhalation of droplets and particles. Available with or without exhalation valve.

| Cat. No. | Pack qty |
|----------|----------|
| 16669272 | 10       |



# Respirators

## Roesner Mautby Meditrade™

### FFP2 Disposable Respirator Face Mask

- Tested and certified FFP2 disposable respirator
- Without exhalation valve
- Head bands enable a more secure, tighter and comfortable fit
- Head bands make wearing glasses more comfortable and enable good compatibility with various eye protection products

FFP2 Disposable respirator to protect against inhalation of droplets and particles. Available with head band and without exhalation valve.



| Cat. No. | Pack qty |
|----------|----------|
| 17176314 | 40       |

## Uvex™

### Respirator Face Mask

- Preformed mask
- Labelled for use with high levels of dust exposure (D)

Breathing protection preformed mask



| Cat. No. | Model                  | Pack qty |
|----------|------------------------|----------|
| 15385782 | silv-Air c 2200 FFP2   | 20       |
| 15335792 | Classic cup style FFP3 | 15       |
| 15395792 | 3220 silv-Air Classic  | 15       |

## Medlink™

### Type IIR 3-Ply Disposable Face Mask

- Disposable, single-use protection
- A CE Class I Medical Device, certified under (EU) 2017/745, meeting the EN14683:2019 standard for medical face masks
- Features a soft, flexible, internally wired upper seam for a comfortable snug fit around the nose and knitted elastic ear loops
- Nonwoven polypropylene inner and outer layers

Type IIR Disposable Face Mask is a high quality CE mask, suitable for general medical environments. These polypropylene 3-ply pleated masks with ear loops provide excellent fit with adjustable nose seal for extra security. Fully certified, quality guaranteed.



| Cat. No. | Pack qty |
|----------|----------|
| 17385170 | 50       |

## 3M™

### Versaflo™ S-Series Hood

- Integrated head suspension provides head, face, neck and shoulder coverage
- Protects face and eyes from liquid splash and low energy flying particles and dust (Grade F)
- Suitable for applications which require frequent replacement of the entire headtop assembly or those where there is less soiling of the outer fabric
- No assembly required

The 3M™ Versaflo™ S-Series Hood head cover with integrated head suspension provides head, face, neck and shoulder coverage as well as providing eye and face protection from liquid splash and low energy flying particles and dust.



| Cat. No. | Pack qty |
|----------|----------|
| 10450180 | 1        |

## 3M™

### Versaflo™ S-Series Hood and Head Cover Assemblies

- Hood with reusable suspension providing head, face, neck and shoulder coverage
- Provides eye and face protection to EN166 - liquid splash and low energy impact (grade F) - the same classification for impact resistance as safety spectacles
- Externally adjustable airflow to suit the wearers needs
- Highly cost effective for high disposal rate environments

Tucking the inner shroud into a shirt or protective coverall allows excess air to be channeled over the body, providing additional comfort. The 3M Versaflo S-Series Hood Assembly is one-size-fits-all.



| Cat. No. | Model    | Type                               | Pack qty |
|----------|----------|------------------------------------|----------|
| 11751383 | S-605-10 | Replacement Hood with Inner Collar | 10       |
| 11761383 | S-607-10 | Replacement Hood with Inner Shroud | 10       |

## 3M™

### 6000 Series Reusable Full Face Mask Respirators

- Large lens for wide field of view and excellent visibility
- Well-balanced design with silicone face seal for greater comfort and durability
- Unique center adapter directs exhaled breath and moisture downward, reducing valve debris and facilitating quick and easy cleaning

Offers lightweight comfort and ease of use. 3M™ 6000 Series Reusable Full Face Mask Respirators have the 3M Bayonet Connection System, enabling connection to a broad range of twin lightweight filters to protect against gases, vapours and particulates.



| Cat. No. | Size   | Pack qty |
|----------|--------|----------|
| 12362319 | Medium | 1        |
| 12372319 | Large  | 1        |



**3M™****Qualitative Fit-Test Kit, Sweet**

- Works by spraying a sweet solution into the hood environment
- If wearer does not detect sweet taste, the fit test has been passed

These safety products must be used in accordance with OSHA regulations and the user instructions, warnings and limitations accompanying each product. Misuse may result in sickness or death.

The 3M™ Qualitative Fit-Test Kit, Sweet can be used to check face-to-respirator seal on any particulate respirator or gas/vapor respirator with a particulate prefilter



| Cat. No. | Pack qty |
|----------|----------|
| 10676285 | 1        |

**3M™****Qualitative Fit-Test Kit, Bitter**

- Fit test kit for respirators
- Kit includes: hood, collar, 2 nebulisers, bitter tasting sensitivity solution, bitter tasting fit test solution and laminated user instructions
- FT-30 uses a test solution of denatonium benzoate to produce a very bitter taste
- For Occupational Use Only

These safety products must be used in accordance with OSHA regulations and the user instructions, warnings and limitations accompanying each product. Misuse may result in sickness or death.

Contains everything necessary to fit test any particulate respirator or gas/vapor respirator with a particulate prefilter



| Cat. No. | Pack qty |
|----------|----------|
| 12302419 | 1        |

**3M™****Fit-Test Solution FT-12, Sweet**

- Sweet taste fit test solution for fit testing
- Used with the 3M™ Qualitative Fit Test Apparatus FT-10 and 3M™ Training and Fit Testing Case FT-20
- Can be used to check face-to-respirator seal on any particulate respirator or gas/vapor respirator with a particulate prefilter
- For Occupational Use Only These safety products must be used in accordance with OSHA regulations and the user instructions, warnings and limitations accompanying each product. Misuse may result in sickness or death.

Use to check face-to-respirator seal on any particulate respirator or gas/vapor respirator with a particulate prefilter



| Cat. No. | Pack qty |
|----------|----------|
| 15256703 | 1        |

**3M™****Secure Click™ Filter Retainer D701**

- Used to hold 3M™ Secure Click™ Particulate Filters D7N11 or D7P71 in place on 3M™ Secure Click™ Cartridges D8000 Series
- 3M™ Secure Click™ Filter Retainer D701 is designed for use with 3M™ Secure Click™ Respirators 800 Series.



| Cat. No. | Pack qty |
|----------|----------|
| 16496370 | 50PR     |

**3M™****Respirator Cleaning Wipes**

- Moist towelettes clean dirt and perspiration off facepiece respirators
- Convenient for respirator hygiene and sanitary protection between uses
- Alcohol-free towelettes contain no alcohol or other harsh chemicals

Provides disposable, one-time use for convenience and to prevent the spread of germs. 3M™ Respirator Cleaning Wipes are individually packaged and sealed to ensure uncompromised sanitary quality.



| Cat. No. | Pack qty |
|----------|----------|
| 12382339 | 40       |

**3M™****Respirator Carry Cases**

- Fits any full face mask
- Robust and durable design
- Adjustable shoulder strap
- Name card window included

A large and robust case to carry full face masks and spare filters.



| Cat. No. | Pack qty |
|----------|----------|
| 15222800 | 1        |



# EYE, FACE AND HEAD PROTECTION



Eye injuries can have a variety of causes. They are typically associated with exposure to mechanical, optical, chemical or thermal risks, are often irreversible and occur if not managed by appropriate eye or face protection equipment. It is therefore of paramount importance to be aware of the risks in the working environment and to seek appropriate protection for one of the most complex and sensitive parts of the human body.

The Fisher Scientific channel offers a broad assortment of eye and face protection products including:

- **Safety glasses**
- **Over the glasses**
- **Goggles**
- **Face shields**
- **Prescription glasses\***
- **Blue light filtering eyewear and safety glasses**
- **Eyewear accessories**

\*Check with your safety specialist or account manager for regional availability.

Additional considerations when choosing the product includes compatibility with other personal protective equipment (hearing, head, respiratory protection), duration of use, comfort and strain on ears and nose, Optical class for clearness of vision, humidity and fogging conditions and exposure to blue LED or computer screen light emissions.



**Bollé Eyewear Protection Table** ▶

**fisher scientific**

## Safety Starts Here

Keep your people, processes, and facilities safe.

[Learn More](#)

Safety | Protecting What Matters Most

## Bollé Safety™ Faceshield

- Adjustable
- Protect workers using Bollé Safety Face Shields to keep safety first and foremost.



| Cat. No. | Model   | Pack qty |
|----------|---------|----------|
| 12629200 | Tilting | 1        |
| 12699210 | Clear   | 1        |

## Bollé Safety™ Faceshield

- Adjustable
- Protect workers using Bollé Safety Face Shields to keep safety first and foremost.



| Cat. No. | Pack qty |
|----------|----------|
| 12639200 | 1        |

## Fisherbrand™ Disposable Face Shields

- PET lens
  - Treated with anti-fog and anti-static coating
  - Headpiece is held in place by a stretch strap
  - Includes a latex-free foam band for comfortable extended wear
- High-quality, optically clear, distortion-free 7 mil film.



| Cat. No. | Pack qty |
|----------|----------|
| 16623662 | 200      |

## Uvex™ 9705 Faceshield

- Uncoated
  - Clear
  - Headband
- Uncoated facemask with head band



| Cat. No. | Pack qty |
|----------|----------|
| 15316162 | 1        |

## 3M™ Goggle Gear™ 500 Safety Goggles



- Modern slim-line and lightweight design for an excellent fit
  - Easy-to-adjust elastic nylon headband for stability and comfort
  - Pivoting ratchet for convenient personal adjustment
  - 3M™ Scotchgard™ Anti-Fog Coating provides superior anti-fog and anti-scratch properties
- 3M™ Goggle Gear™ Safety Goggles (GG501SGAF-EU) have a clear, polycarbonate lens and 3M™ Scotchgard™ Anti-Fog/Anti-Scratch Coating for superior anti-fog protection.

| Cat. No. | Pack qty |
|----------|----------|
| 15603074 | 1        |

## 3M™ Goggle Gear™ Safety Goggles, Anti-Fog / Anti-Scratch Coating (K&N)



- Modern slim-line and lightweight design for an excellent fit
  - Adjustable Neoprene headband for easy cleaning and sterilisation
  - Pivoting ratchet for convenient personal adjustment
  - 3M™ Scotchgard™ Anti-Fog Coating provides superior anti-fog and anti-scratch properties
- Goggle Gear™ Anti-Fog / Anti-Scratch Coating (K&N)

| Cat. No. | Pack qty |
|----------|----------|
| 17227680 | 10       |

## Bollé Safety™ Superblast Safety Goggles



- Flexible and clear frame for increased comfort
  - Intuitive and simple goggle-visor assembly system
  - PLATINUM™ coating
- Industrial goggles

| Cat. No. | Model      | Pack qty |
|----------|------------|----------|
| 17314870 | SUPBLAPSIP | 5        |
| 17324870 | SUPBLEPSI  | 5        |



## Get Same-Day Dispatch

on Our Most Popular Products

[Learn More >](#)



# Eye, Face and Head Protection

## Bollé Safety™

### Atom Platinum™ Safety Goggles

- Frame material: blue thermoplastic rubber
  - Lens material: clear polycarbonate
  - Lense coating: Platinum™ anti-fog / anti-scratch coating
- Compact, lightweight and extremely comfortable, ATOM model safety goggles offer enhanced protection



| Cat. No. | Pack qty |
|----------|----------|
| 12679090 | 1        |

## Bollé Safety™

### B-Line™ BL15 Clear Goggles

- Clear translucent frame
- Sealed or vented versions available
- Adjustable strap
- Fits over prescription glasses

B-LINE is a range of safety eyewear accessible to all and is adapted to the most common industrial risks.



| Cat. No. | Lens Coating | Pack qty |
|----------|--------------|----------|
| 12649130 | Not Coated   | 1        |
| 12659130 | Anti-fog     | 1        |

## Bollé Safety™

### Cobra Clear Safety Glasses

- Clear
- Anti-scratch coating
- Anti-fog coating
- Easy to clean

Cobra Safety Glasses come with anti-scratch/anti-fog coatings.



| Cat. No. | Pack qty |
|----------|----------|
| 15612617 | 1        |

## Bollé Safety™

### Coverall Clear Safety Goggles

- High fogging resistance
- Autoclave compatible product
- Overflow chute for liquids
- PLATINUM coating : anti-scratch and anti-fog

Coverall Clear Safety Goggles are specially designed to guarantee total comfort and optimum protection in controlled environments or sensitive and sterile environments such as pharmacies, micro-electronics, and operating theatres.



| Cat. No. | Model              | Pack qty |
|----------|--------------------|----------|
| 12697723 | Coverall Autoclave | 1        |
| 15548281 | Coverall Clean     | 5        |

## Bollé Safety™

### Atom Platinum™ Safety Goggles

- Frame material: blue thermoplastic rubber
  - Lens material: clear polycarbonate
  - Lense coating: Platinum™ anti-fog / anti-scratch coating
- Compact, lightweight and extremely comfortable, ATOM model safety goggles offer enhanced protection



| Cat. No. | Pack qty |
|----------|----------|
| 12669090 | 1        |

## Bollé Safety™

### Baxter Platinum™ Clear Safety Spectacles

- Effective protection from solid and liquid sprays and from dust
- Comfortable fit
- Polycarbonate construction
- Models available with clear, smoke or CSP (blue-light filter) lenses

Bollé™ Baxter safety spectacles deliver total comfort thanks to their highly wraparound frame, and with their removable waterproof foam straps, offer effective protection from solid and liquid sprays and dust.



| Cat. No. | Pack qty |
|----------|----------|
| 15801745 | 1        |



## Get Same-Day Dispatch

on Our Most Popular Products

[Learn More >](#)



## Bollé Safety™

### Coverall 2 Sterile Goggles

- Can be sterilised using gamma, beta radiation and ETO gas
- Disposable
- Liquid overflow chute

Designed to guarantee total comfort and optimum protection in sensitive and sterile environments such as pharmacies, micro-electronics and operating theatres



| Cat. No. | Pack qty |
|----------|----------|
| 17183715 | 48       |

## Bollé Safety™

### Superblast Safety Goggles

- Flexible and clear frame for increased comfort
- Intuitive and simple goggle-visor assembly system
- PLATINUM™ coating

Industrial goggles



| Cat. No. | Pack qty |
|----------|----------|
| 15830274 | 1PR      |

## Bollé Safety™

### Visor For Superblast Goggles

- Intuitive and simple goggle-visor assembly system
- Easy fit

Optional Superblast goggle visor



| Cat. No. | Pack qty |
|----------|----------|
| 17334870 | 1        |

## Uvex™

### 9309 Pheos CX2 Sonic Safety Goggles

- Compact, wide vision goggles with supravision extreme coating
- An i-gonomics product that combines comfort with an ergonomic design
- Soft forehead and nose piece moulded directly onto the lens
- Light textile headband for a secure and comfortable fit

Functional, wide-vision goggles with supravision coating technology to provide a clear field of vision even in extreme climates.



| Cat. No. | Pack qty |
|----------|----------|
| 17237331 | 1        |

## Uvex™

### 9320 Megasonic Safety Goggles

- Lens design has an exceptional field of vision, with optical class 1 clarity in every direction
  - Sporty, ergonomic design is comfortable for protection without distraction
  - Over-the-glass compatible to provide additional protection for users who also require prescription spectacles
  - Flexible frame and extra-wide headband for enhanced fit and comfort
- Lens design provides an exceptional field of vision with optical class 1 clarity in every direction. The sporty, ergonomic design and ultra-comfortable fit offers a high level protection, without distraction.



| Cat. No. | Pack qty |
|----------|----------|
| 17257331 | 1        |

## Uvex™

### Ultrasonic Safety Goggles

- Goggles in sporty design, also suitable as overspecs
- Lenses can be changed
- PC lens, clear
- Certified to EN 166 (personal eye protection) and EN 170 (UV filters)

Soft, flexible component provides complete side protection even over prescription spectacles.



| Cat. No. | Frame Color  | Pack qty |
|----------|--------------|----------|
| 10355772 | Gray, Orange | 1        |
| 10228092 | Black, Gray  | 1        |

## 3M™

### Solus™ 1000 Safety Glasses, Scotchgard™ Anti-Fog / Anti-Scratch Coating (K&N)

- Stylish and modern look slim frame with colour accented soft temple components
- Strong polycarbonate lens for impact resistance
- 3M™ Scotchgard™ Anti-Fog Coating offers superior anti-fog and anti-scratch properties
- Lightweight with soft cushioning on nose bridge

3M™ Solus™ Safety Glasses, feature a clear, strong polycarbonate lens in a slim, stylish, green and black-accented colour frame. Our safety glasses have 3M™ Scotchgard™ Anti-Fog / Anti-Scratch Coating, and a soft temple and nose bridge.



| Cat. No. | Frame Color  | Pack qty |
|----------|--------------|----------|
| 15707717 | Green, Black | 1        |
| 15767717 | Blue, Black  | 1        |





# Eye, Face and Head Protection

3M™

## SecureFit™ 400X Safety Glasses, Scotchgard™ Anti-Fog / Anti-Scratch Coating (K&N)



- Safety glasses with 3M™ Pressure Diffusion Temple Technology for comfort
- Wraparound design to improve the security of fit and prevent slipping
- Padded temple touchpoints for increased comfort over the ears
- Soft nose bridge for a more comfortable fit

3M™ SecureFit™ 400X Safety Glasses have 3M™ Pressure Diffusion Temple Technology, flexible temple arms and combined soft nose bridge/brow guard. Lightweight anti-scratch & superior anti-fog, rimless polycarbonate lens for indoor/outdoor use.

| Cat. No. | Frame Color  | Pack qty |
|----------|--------------|----------|
| 16416380 | Green, Clear | 1        |
| 16426380 | Blue, Gray   | 1        |

3M™

## SecureFit™ 100 Safety Glasses



- Economical robust 3M™ SecureFit™ Safety Glasses range
- 3M's innovative SecureFit™ Pressure Diffusion Temple technology design features slotted ribs that provide comfortable pressure equalization. The temples flex and self-adjust to the size of wearer's head
- Slim wrap around design to look better on smaller faces
- Economical Bulk package (5-pack) available (black frame only)

3M™ SecureFit™ 100 Series features a sleek, sporty lens shape coupled with a patented temple design that self-adjusts to different head sizes to provide a stylish yet comfortable fit for an extended period of time.

| Cat. No. | Model          | Lens Coating           | Pack qty |
|----------|----------------|------------------------|----------|
| 17324680 | SF103AF-BLU-EU | Anti-Scratch, Anti-Fog | 1        |
| 17324690 | SF101AS-BLK-EU | Anti-Scratch           | 20       |
| 17334690 | SF101AS-BLU-EU | Anti-Scratch           | 1        |
| 17344690 | SF102AF-BLU-EU | Anti-Scratch, Anti-Fog | 1        |
| 17354690 | SF101AF-BLK-EU | Anti-Scratch, Anti-Fog | 20       |
| 17364690 | SF107AF-BLU-EU | Anti-Scratch, Anti-Fog | 1        |
| 17384690 | SF101AF-BLU-EU | Anti-Scratch, Anti-Fog | 1        |

3M™

## SecureFit™ 500 Safety Glasses



- Sleek and compatible 3M™ SecureFit™ Safety Glasses range with adjustable ratchet temples to adjust the lens for facial features and eyeglass position, designed to help improve the positioning when worn with respirators
- 3M's innovative SecureFit™ Pressure Diffusion Temple technology design features slotted ribs that provide comfortable pressure equalization. The temples flex and self-adjust to the size of wearer's head
- 3M™ Scotchgard™ Anti-Fog Coating provides superior anti-fog and anti-scratch properties (available on selected models)
- Protection against UV up to 400 nm

3M™ SecureFit™ Safety Glasses 500 Series features a stylized lens shape with temples that automatically self-adjust to help provide a secure and comfortable fit.

| Cat. No. | Model               | Lens Coating                       | Pack qty |
|----------|---------------------|------------------------------------|----------|
| 17374670 | SF501SGAF-BLK-EU    | Scotchgard™ Anti-Fog, Anti-Scratch | 1        |
| 17384670 | SF501SGAF-RED-EU    | Scotchgard™ Anti-Fog, Anti-Scratch | 1        |
| 17304680 | SF509AF-BLK         | Anti-Scratch, Anti-Fog             | 1        |
| 17314680 | SF501SGAF-BLK-FM-EU | Scotchgard™ Anti-Fog, Anti-Scratch | 1        |
| 17334680 | SF501SGAF-GRN-EU    | Scotchgard™ Anti-Fog, Anti-Scratch | 1        |
| 17344680 | SF517ASP-GRN-EU     | Anti-Scratch+ (K)                  | 1        |
| 17354680 | SF550ASP-GRN-EU     | Anti-Scratch+ (K)                  | 1        |
| 17364680 | SF501ASP-BLK-EU     | Anti-Scratch+ (K)                  | 1        |
| 17374680 | SF503SGAF-BLK-EU    | Scotchgard™ Anti-Fog, Anti-Scratch | 1        |
| 17384680 | SF530ASP-GRN-EU     | Anti-Scratch+ (K)                  | 1        |
| 17394680 | SF507SGAF-BLK-EU    | Scotchgard™ Anti-Fog, Anti-Scratch | 1        |
| 17304690 | SF505SGAF-DGR-EU    | Scotchgard™ Anti-Fog, Anti-Scratch | 1        |
| 17314690 | SF501AF-BLK-EU      | Anti-Scratch, Anti-Fog             | 1        |
| 17374690 | SF528SGAF-DGR-EU    | Scotchgard™ Anti-Fog, Anti-Scratch | 1        |
| 17394690 | SF502SGAF-BLK-EU    | Scotchgard™ Anti-Fog, Anti-Scratch | 1        |

3M™

## Over-the-Glass Visitor Safety Glasses



- Lightweight lenses
- Moulded sideshields and browguards
- Can be worn on their own or over current style prescription spectacles.
- Integrated side-shields for maximum protection

To be worn on their own or over current style prescription spectacles. 3M™ Over-the-Glass Visitor Glasses with integrated molded sideshields and browguards provide maximum protection.

| Cat. No. | Pack qty |
|----------|----------|
| 10655325 | 1        |

**3M™**

## SecureFit™ Over-the-Glass Safety Glasses, Scotchgard™ Anti-Fog (K&N)



- Adjustable Ratchet Temples
  - Pressure Diffusion Temple (PDT) Technology helps diffuse pressure over the ear for a secure and comfortable fit
  - Scotchgard™ Anti-Fog Coating resists fogging longer than traditional anti-fog coatings, up to 25 washings with water
  - Polycarbonate Lenses absorb 99.9% of UVA and UVB rays
- Anti-scratch and anti-fog coatings provide increased durability and improved vision.

| Cat. No. | Pack qty |
|----------|----------|
| 17237710 | 20       |

**3M™**

## SecureFit™ Safety Glasses, Anti-Fog / Anti-Scratch Coating (K&N)



- Diffuse pressure over the ear with 3M™ Pressure Diffusion Temple Technology
  - Soft, adjustable nose pads provide added comfort
  - Flat and flexible temples combine easily with earmuffs and provide solid side protection
  - Wraparound design gives the user a wide field of vision
- Wide flexible temple arms, soft, adjustable nose pads and a clear, anti-scratch and superior anti-fog, rimless polycarbonate lens.

| Cat. No. | Frame Color | Description      | Pack qty |
|----------|-------------|------------------|----------|
| 17267660 | Red/Gray    | SF401SGAF-RED-EU | 20       |
| 17207670 | Gray/Blue   | SF401SGAF-BLU-EU | 20       |

**Bollé Safety™**

## Ness+ Platinum™ Safety Glasses



- Ultra-wraparound frame
  - PC/TPR co-injected temples for greater comfort
  - Panoramic field of vision
  - Scratch and fog resistant coating
- Ness+ Platinum™ Safety Glasses featuring all the benefits of the NESS model with added comfort from co-injected temples.

| Cat. No. | Pack qty |
|----------|----------|
| 16411881 | 1        |

**Bollé Safety™**

## Over-the-Glass Safety Glasses



- Highly wrap-around frame
  - Side, upper and lower protection
- Enjoy guaranteed maximum safety for all, including wearers of prescription glasses, with Bollé Safety™ Over-the-Glass Safety Glasses. Made from polycarbonate in a highly wrap-around and attractive style.

| Cat. No. | Pack qty |
|----------|----------|
| 13128766 | 1        |

**Bollé Safety™**

## Cobra Clear Safety Glasses



- Clear
  - Anti-scratch coating
  - Anti-fog coating
  - Easy to clean
- Cobra Safety Glasses come with anti-scratch/anti-fog coatings.

| Cat. No. | Model    | Pack qty |
|----------|----------|----------|
| 13490619 | COBFTPSI | 1        |
| 12659150 | COBHDP1  | 1PR      |

**Bollé Safety™**

## Rush+ Platinum™ Safety Glasses



- Upper protection
  - Non-slip temples
  - Adjustable non-slip bridge
  - Safety glasses with clear lenses are essential indoors
- The RUSH model offers optical quality, permanent comfort, and modern design.

| Cat. No. | Lens Tint | Frame Color | Pack qty |
|----------|-----------|-------------|----------|
| 15568291 | Smoke     | Black       | 10       |
| 15216705 | Clear     | Red, Black  | 1        |
| 15375067 | Clear     | White, Blue | 1PR      |

**Bollé Safety™**

## Tryon Platinum™ Clear Safety Glasses



- Ultra wrap-around frames, with a sporty design
  - PLATINUM™ coating
  - Co-injected PC/TPR temples
  - Non-slip adjustable bridge
- Safety glasses with clear lenses that are essential indoors.

| Cat. No. | Model                  | Pack qty |
|----------|------------------------|----------|
| 15821745 | Tryon                  | 1        |
| 15831745 | Tryon Over-the-glasses | 1        |



# Eye, Face and Head Protection

## Bollé Safety™

### Mamba Clear Safety Glasses



- Lightweight
- Non-slip bridge
- Co-injected temples
- All-round vision

Thanks to its many features – lightweight, non-slip bridge, co-injected temples, all-round vision – MAMBA provides perfect comfort for permanent wear.

| Cat. No. | Pack qty |
|----------|----------|
| 11952815 | 1        |

## Bollé Safety™

### Silium+ Platinum™ CSP Safety Glasses



- Ultra-lightweight for extended wear
- Ultra lightweight frame
- Adjustable bridge
- Non-slip bridge

Wear a comfortable and ultra lightweight polycarbonate model for applications that require extended wear. The SILIUM+ is an excellent choice, combining style, ergonomics and performances. The permanent PLATINUM coating is applied to both surfaces, making them extremely scratch and fog resistant.

| Cat. No. | Pack qty |
|----------|----------|
| 15580984 | 1        |

## Bollé Safety™

### Squale Over-the-Glass Safety Goggles



Squale Over-the-Glass Safety provide excellent protection for wearers of prescription glasses.

Technology approved for permanent wear and certified with perfect optical quality with anti-fog and antiscratch coatings.

99.9% UVA/UVB protection.

| Cat. No. | Pack qty |
|----------|----------|
| 12394739 | 1        |

## Bollé Safety™

### Tracker Platinum™ Clear Safety Glasses



- Upper protection
- Removable foam reinforcement
- Lower protection
- Side ventilation

Ultra-comfortable and technical TRACKER provides protection from all mechanical risks and also chemical risks making it unique in the safety glasses range.

| Cat. No. | Pack qty |
|----------|----------|
| 11812731 | 1        |

## Bollé Safety™

### Visiteur Clear Safety Glasses



- Polycarbonate
- Clear lenses
- Browguard
- Hinged sidearms

Manufactured from polycarbonate. Bollé Safety™ VISITEUR Spectacles can be worn over spectacles.

| Cat. No. | Pack qty |
|----------|----------|
| 10565234 | 1        |

## Fisherbrand™

### 200 Series Safety Glasses



- One-piece lens provides a full and unobstructed field of vision
  - Absorbs >99.9% of harmful UV light
  - Molded-in sideshields and browguards
  - Adjustable spatula temples
- Economical, lightweight protection

| Cat. No. | Pack qty |
|----------|----------|
| 15618825 | 12       |

## Fisherbrand™

### Visitorspec Safety Glasses



- Economical safety spectacles
- 100% impact-resistant polycarbonate wraparound unilens design with blue temples
- Clear lens absorbs >99.9% of harmful UV light
- Uncoated lens

Ideal for protecting visitors in industrial or medical settings.

| Cat. No. | Pack qty |
|----------|----------|
| 15628825 | 12       |

## Fisherbrand™

### Visitorspec Safety Glasses, Coated, Antifog



- Economical safety spectacles
  - 100% impact-resistant polycarbonate wraparound unilens design with blue temples
  - Clear lens absorbs >99.9% of harmful UV light
  - Fit over prescription eyeglasses
- Ideal for protecting visitors in industrial or medical settings.

| Cat. No. | Pack qty |
|----------|----------|
| 15819257 | 12       |

## Uvex™

### Astrospec 2.0 Safety Spectacles

- Panoramic polycarbonate lens with integrated side shield for optimal eye area protection
- Uvex ventilation system with labyrinth seal for added comfort around the eyes
- Certified to EN 166 (personal eye protection) and EN 170 (UV filters)
- Multi-level side arm inclination allows the wearer to adjust the spectacles to suit their face shape

Maximum eye area protection, including at the sides, with innovative ventilation technology and contemporary wear comfort.



| Cat. No. | Lens Tint | Pack qty |
|----------|-----------|----------|
| 15385882 | Amber     | 1        |
| 15395882 | Gray      | 1        |
| 15315892 | Clear     | 1        |

## Uvex™

### 9169 Super F Over-the-Glass Safety Glasses

- Overspecs for users who also wear prescription lenses with an arm-hinge concept
- Side arms graduate to soft, flexible material for enhanced comfort and grip
- Unrestricted peripheral vision with Supravisión Excellence Coating
- Inside: Anti-fog

These extremely comfortable safety spectacles provide excellent eye area protection, and fit perfectly over conventional prescription lenses. Specs are available in a variety of lens coating and lens tints.



| Cat. No. | Lens Tint           | Pack qty |
|----------|---------------------|----------|
| 17207261 | Light Brown (CBR65) | 1        |
| 17217261 | Clear               | 1        |

## Uvex™

### 9192 Pheos S Spectacles

- A narrow version of the original pheos series to provide users with smaller heads an optimal, and secure fit
- Soft, non-slip arm end prevents pressure points for enhanced comfort
- Duo-spherical lenses provide a large field of vision
- Design is extremely compatible with ear defenders, helmets, and bump caps

Duo-spherical lenses provide a wide field of vision with soft, non-slip arm ends to prevent pressure points for enhanced comfort. A narrow version of the original pheo series designed to provide an optimal, secure fit for those with smaller heads.



| Cat. No. | Pack qty |
|----------|----------|
| 17237281 | 1        |

## Uvex™

### 9193 Sportstyle Safety Spectacles

- Innovative safety spectacles feature a sporty design that combines functionality and safety
  - Feather-light construction weighs only 23 grams
  - Soft, adjustable nosepiece with soft, anti-slip earpieces for a pressure-free fit
  - Lens geometry ensures optimum visionSupravisión AR Coating
- Innovative safety spectacles featuring a sporty design, combined with maximum functionality and safety. Feather-light construction weighs only 23 grams, making these spectacles comfortable to wear for extended periods of time.



| Cat. No. | Lens Coating           | Lens Tint           | Pack qty |
|----------|------------------------|---------------------|----------|
| 17277281 | Supravisión Extreme    | Light Brown (CBR65) | 1        |
| 17297281 | Supravisión Excellence | Clear               | 1        |
| 17207291 | Supravisión Extreme    | Gray                | 1        |

## Uvex™

### Pheos Safety Spectacles

- Safety spectacles with a modern, sporty design
- Duo-spherical lens provides a large field of vision
- Can easily be combined with other forms of PPESupravisión Excellence Coating
- Interior: Anti-fog

A soft component connected directly to lens provides optimum protection against dust and water. The innovative X-tended Eyeshield adapts to the wearer's face for enhanced comfort, with X-Twist side arm technology for a secure fit.



| Cat. No. | Lens Tint           | Frame Color  | Pack qty |
|----------|---------------------|--------------|----------|
| 17297291 | Light Brown (CBR65) | White, Black | 1        |
| 17207301 | Gray                | White, Black | 1        |
| 17227301 | Clear               | Blue, Gray   | 1        |

## Uvex™

### I-vo 9160 Protective Eyewear

- Wraparound style spectacle with excellent field of vision
- Straight side arms grip the side of the head not behind the ears. Provides a secure comfortable, slip free wear
- Combines hard/soft components - increased comfort around sensitive nose, brow and ear areas
- Fully adjustable side arms enables wearer to achieve individual fit for better protection and comfort

Wraparound style spectacle with excellent field of vision



| Cat. No. | Pack qty |
|----------|----------|
| 10031072 | 1        |



# Eye, Face and Head Protection

**Uvex™**

## Super Fit Safety Spectacles

- Flexible and adjustable nose bridge
- UV protection
- Anti-fog
- Scratch-resistant

Super Fit Safety Spectacles with polycarbonate lens.



| Cat. No. | Frame Color | Pack qty |
|----------|-------------|----------|
| 10269758 | White, Lime | 1        |
| 15395962 | White, Blue | 1        |

**Uvex™**

## Super Over-the-Glass Safety Glasses

- Low cost alternative to safety prescription eyewear
  - Uvex permanent lens coating technology: anti-fog coating on the inside of the lens, scratch resistant on the outside
  - Side arms graduate from hard to soft material, gently grips the side of the head for a secure fit
  - Hi resolution lens for improved optical clarity, specifically for wearing two pairs of specs
- Unique frame design that fits comfortably over most prescription spectacles



| Cat. No. | Pack qty |
|----------|----------|
| 10405120 | 1        |

**Uvex™**

## Pheos Safety Spectacles

- Safety spectacles with a modern, sporty design
- Duo-spherical lens provides a large field of vision
- Can easily be combined with other forms of PPE supervision Excellence Coating
- Interior: Anti-fog

A soft component connected directly to lens provides optimum protection against dust and water. The innovative X-tended Eyeshield adapts to the wearer's face for enhanced comfort, with X-Twist side arm technology for a secure fit.



| Cat. No. | Pack qty |
|----------|----------|
| 15366082 | 1        |

**Fisherbrand™**

## Acrylic Safety Glasses Dispenser

- Translucent acrylic dispensers provide easy access to safety accessories
- Ergonomically angled for easy dispensing
- Hinged lid protects glasses from dust and debris
- Flip open top for filling with tilt-open bottom for dispensing



Access safety accessories with ease. Fisherbrand™ Acrylic Safety Glasses Dispenser holds protective goggles, other safety items and personal items to keep them safe and clean. They are ergonomically angled for easy retrieval. Transparent blue dispensers are available in two sizes.

| Cat. No. | Size  | Pack qty |
|----------|-------|----------|
| 11893460 | Large | 1        |
| 11803470 | Small | 1        |

**Bollé Safety™**

## B-Clean™ Pre-Moistened Cleaning Wipes Dispenser

- Alcohol and silicone free
- Water-based formula guarantees a perfect cleaning and protection for your spectacles and goggles



B-Clean Bollé Safety™ range of cleaning solutions guarantees optimum cleaning. Alcohol and silicone free, its water-based formula guarantees a perfect cleaning and protection for your spectacles and goggles.

| Cat. No. | Pack qty |
|----------|----------|
| 10308429 | 500      |

**Uvex™**

## Wet Wipes

- Wet wipes for safety eyewear
- Individually wrapped
- Silicone free

Uvex™ lens cleaning wipes are supplied pre-moistened in individual sealed sachets. Suitable for all lens types.



| Cat. No. | Pack qty |
|----------|----------|
| 10064202 | 100      |



3M™

## First Base™ + Bump Caps

- Provides industrial bump protection to EN812
- Flexible shell made with ABS plastic, can be removed for cleaning
- Airflow channels for ventilation
- Absorbent terry toweling sweatband

Designed to provide limited head protection from bumps and minor lacerations to the head from stationary objects. Patented flexible shell design manufactured from durable ABS plastic provides industrial bump protection to EN812.



| Cat. No. | Product Type  | Color      | Pack qty |
|----------|---------------|------------|----------|
| 17267680 | Reduced Peak  | Gray       | 20       |
| 17277680 | Standard Peak | Gray       | 20       |
| 17287680 | Standard Peak | Navy Blue  | 20       |
| 17297680 | Reduced Peak  | Black      | 20       |
| 17207690 | Micro Peak    | Navy Blue  | 20       |
| 17217690 | Reduced Peak  | Navy Blue  | 20       |
| 17227690 | Standard Peak | Black      | 20       |
| 17267690 | Reduced Peak  | Royal Blue | 20       |

Uvex™

## 9790 Pheos Faceguard

- Fully pre-assembled face protection multisystem is supplied ready for immediate use
- Polycarbonate visor with supravision excellence coating and variable locking positions
- Spring-loaded mechanism ensures the center of gravity is central to encourage a natural posture and avoid neck strain
- One-handed variable width adjustment systems ensures a comfortable, individualized fit



Faceguards are supplied fully pre-assembled making them ready for immediate use. Robust polycarbonate visor features supravision excellence coating, variable locking positions, and prevents neck strain.

| Cat. No. | Pack qty |
|----------|----------|
| 17299211 | 1        |

**3M**

PPE to Keep You Safer

[Learn More](#)

**fisher scientific**

Safety Starts Here

Keep your people, processes, and facilities safe.

[Learn More](#)

**Safety** | Protecting What Matters Most



# HEARING PROTECTION

Noise induced hearing loss is the most commonly reported occupational medical condition in the European Union. One third of workers in Europe are exposed to potentially dangerous levels of noise. It is therefore important to identify this risk in advance and control it by applying appropriate protection. The Fisher Scientific channel offers a wide range of hearing protection products to fit a variety of applications, noise levels and user requirements.

All our hearing protection products carry the CE mark and have been tested in accordance with the applicable European standards and in line with current EU legislation.

DIN EN 352 norm for hearing protection is broken down to following parts:

|            |        |                                             |
|------------|--------|---------------------------------------------|
| DIN EN 352 | Part 1 | Earmuffs                                    |
|            | Part 2 | Ear plugs                                   |
|            | Part 3 | Earmuffs attached to a safety helmet        |
|            | Part 4 | Level-dependent hearing protection earmuffs |
|            | Part 5 | Active noise reduction earmuffs             |
|            | Part 6 | Earmuffs with safety-related audio input    |
|            | Part 7 | Level-dependent earplugs                    |
|            | Part 8 | Audio earmuffs for entertainment            |

When managing the noise make sure to choose the right protection for you:

1. Pick a product that is suitable for the noise level of your surroundings
2. Consider choosing between: Earmuffs (headband/helmet-mount), Earplugs (disposable/reusable, banded/corded/uncorded)
3. Take into account the duration of use, the weight, comfort, fit and compatibility with other PPE (head protection, eye-wear, respirators)
4. Strike the balance between the need to protect your hearing and to maintain awareness of your surrounding or your ability to communicate
5. Check out our assortment of advanced hearing protection communicator devices for improved communication functionality
6. Scroll through our hearing protection accessories for an even more user-friendly experience

# HEARING PROTECTION

## Hearing Protection Guide


Below is a chart that gives you an overview of which hearing protection may be suitable based on the noise level.



## Hearing Protection Size and fit

Everyone's ear canal is unique — much like a fingerprint. Which is why it's so important that you choose adequate and suitable hearing protection that is the correct size and form and delivers a good fit. Try out multiple options and sizes for best experience.

- If the earplugs are too big, they are unlikely to sit deep enough in the ear canal, so the specified protection level cannot be achieved. They'll also feel uncomfortable
- If the earplugs are too small, although they may be comfortable to wear, there could be noise leakage and reduced protection capacity which over time can cause noise-induced hearing loss
- Round earplugs don't necessarily completely seal an oval-shaped ear canal, hence the products with exact-fit technology in our offering

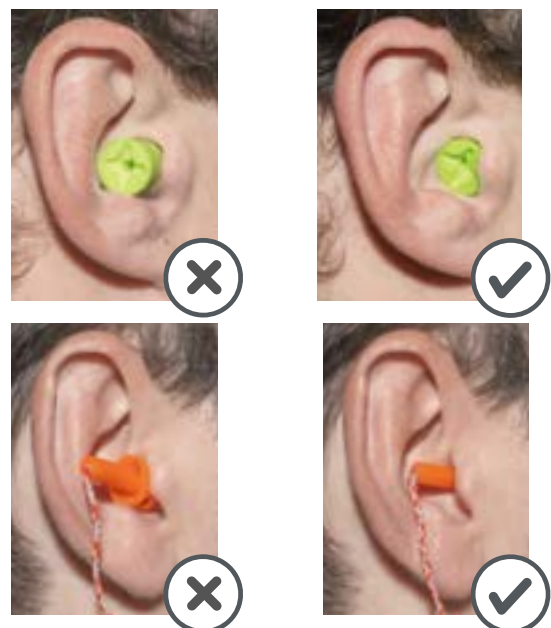

Click on a product to access a full detailed product selection

# Hearing Protection

3M™

## PELTOR™ Earmuffs, Green

- Lightweight, low-profile design
  - Offered in over-the-head or hard hat-attached styles
  - Twin headband design helps reduce heat buildup with good fit and balance
  - Wire headband offers consistent pressure over prolonged wearing periods
- 3M™ PELTOR™ Earmuffs X1 are our lightweight hearing protectors with comfortable, soft ear cushions.



| Cat. No. | Pack qty |
|----------|----------|
| 13479918 | 1        |

Uvex™

## K2 Foldable Earmuffs

- Extra-soft memory foam ear cushions can be worn for long periods of time without irritation
- Foldable headband is compact and lightweight
- Hi-viz design increases visibility and user safety

K-Series Ear Muffs offer a high level of protection in addition to lightweight, extra-soft memory foam ear cushions for long lasting comfort.



| Cat. No. | Pack qty |
|----------|----------|
| 17230311 | 1        |

Uvex™

## X-Fit Disposable Ear Plug Dispenser, Blue/Clear

- Wall-mountable, with robust, transparent design
- Collecting tray to catch dispensed earplugs
- Audible 'one-2-click' controlled release system
- Dimensions (H x W x D): 480mm x 170mm x 180mm

The Uvex™ X-Fit Disposable Ear Plug Dispenser is easy to install with a transparent design that makes it easy to monitor supply. A collecting tray catches earplugs released and the dispenser has sufficient capacity to supply large production areas.



| Cat. No. | Pack qty |
|----------|----------|
| 12960375 | 1        |

3M™

## E-A-R™ Ultrafit™ Ear Plugs, Corded

- Triple-flange pliable plug effectively fits most ear canal sizes
- Reduces noise levels by 14-32 dB
- Ideal for dirty environments as no roll down required, simply push them into your ears for hygienic protection
- Clean easily with soapy water and reuse again and again, helping decrease waste

3M™ E-A-R™ UltraFit™ Ear Plugs are reusable and have a proven triple-flange design that fits comfortably in most ears. They reduce noise levels by 14-32 dB and can be cleaned easily with soapy water and reused again and again – helping decrease waste.



| Cat. No. | Pack qty |
|----------|----------|
| 11709315 | 50PR     |

3M™

## E-A-R™ Express™ Ear Plugs, 28 dB, Corded

- Reduces noise levels by 28 dB CE certified EN 353
- Easy to slide gently into your ears with slow recovery patented foam
- Foam tip gives a comfortable and effective seal
- Features a hygienic insertion grip

3M™ E-A-R™ Express™ Ear Plugs are our recognisable yellow and blue earplugs with a foam tip that's shaped and sized for a comfortable fit. They can reduce noise levels by 28 dB and have a hygienic insertion grip.



| Cat. No. | Pack qty |
|----------|----------|
| 15729047 | 100PR    |

Uvex™

## X-Fit Disposable Ear Plugs

- Ergonomically pre-shaped earplugs characterized by very high insulation values
- Soft foam offers a high level of comfort, even after long periods of use
- Suitable for use in extremely noisy environments
- Available in a hygienic polybag, or retail minibox

Ergonomic, pre-shaped ear plugs are characterized by very high insulation values making them suitable for use in extremely noisy environments.



| Cat. No. | Pack qty |
|----------|----------|
| 17240342 | 100PR    |

**Uvex™**

## Com4-Fit Disposable Ear Plugs

- Compact, ergonomic, pre-shaped design sits comfortably on people with smaller ear canals
- Soft foam construction provides a high level of comfort, even after a very long period of use
- Closed skin prevents foreign bodies from penetrating the surface
- Ideal for transporting, and for smaller quantities

Compact, pre-shaped design provides an ideal fit for users with smaller ear canals. Soft foam construction ensures a high level of comfort, even during long periods of use.



| Cat. No. | Packaging Type  | Pack qty |
|----------|-----------------|----------|
| 15172443 | Bagged in pairs | 1        |
| 17260342 | Polybag         | 100PR    |

**Uvex™**

## Whisper Reusable Ear Plugs

- Corded ear plugs can be worn comfortably around the neck in low-noise areas
- Smooth, dirt-repellent surface can easily be cleaned with soap and water
- Meets standard EN 352-2 with additional requirements S and W
- Clear box is included for hygienic storage when not in use

The smooth, dirt-repellent surface of Whisper Ear Plugs can easily be cleaned with soap and water to prevent potential ear injuries caused by dirt particles. Ear plugs are supplied in a clear box for hygienic storage when not in use.



| Cat. No. | Pack qty |
|----------|----------|
| 17200332 | 50PR     |

**Uvex™**

## Whisper Detec Reusable Ear Plugs

- Corded ear plugs can be worn comfortably around the neck in low-noise areas
- Smooth, dirt-repellent surface can easily be cleaned with soap and water
- Integrated metal parts and bright blue color are used for identification during production
- Clear box is included for hygienic storage when not in use

The smooth, dirt-repellent surface of Whisper Ear Plugs can easily be cleaned with soap and water to prevent potential ear injuries caused by dirt particles. Easily detectable, both visually and by machines, due to their striking blue color and integrated metal ball.



| Cat. No. | Pack qty |
|----------|----------|
| 17240332 | 50PR     |

**Uvex™**

## Whisper+ Reusable Ear Plugs

- Corded ear plugs can be worn comfortably around the neck in low-noise areas
- Smooth, dirt-repellent surface can easily be cleaned with soap and water
- Meets standard EN 352-2 with additional requirements S, V, W, and E
- Clear box is included for hygienic storage when not in use

The smooth, dirt-repellent surface of Whisper Ear Plugs can easily be cleaned with soap and water to prevent potential ear injuries caused by dirt particles. Ear plugs are supplied in a clear box for hygienic storage when not in use.



| Cat. No. | Pack qty |
|----------|----------|
| 17210332 | 50PR     |

**Uvex™**

## Uvex X-Fit Disposable Earplugs

- The ergonomically pre-shaped uvex x-fit disposable earplugs provide very strong insulation and are suitable for use in extremely loud environments.
- The soft foam of the earplugs provides a high level of comfort, even when worn for extended periods.

X-Fit Disposable Earplugs with maximum insulation and optimum comfort.



| Cat. No. | Content And Storage   | Pack qty |
|----------|-----------------------|----------|
| 15132443 | 200 Pairs             | 1        |
| 15375722 | 300 Pairs, Refill Box | 300PR    |

**3M™**

## PELTOR™ LiteCom Headset

- Hearing protector with built-in analogue two-way communication radio
  - 8 channels in the PMR 446 MHz band
  - 38 sub-channels
  - Noise cancelling waterproof microphone provides voice-operated transmission (VOX) for hands free use
- 3M™ PELTOR™ LiteCom Headsets are hearing protectors with a built-in pre-programmed two-way communication radio and an integrated noise cancelling microphone. They're built for demanding environments to help you communicate efficiently over hazardous noise.



| Cat. No. | Model          | Pack qty |
|----------|----------------|----------|
| 15749997 | Headband       | 1        |
| 15759997 | Helmet Mounted | 1        |
| 15769997 | Neckband       | 1        |





# APPAREL



## Reusable Lab Coats

Reusable lab coats offer protection for yourself and your clothing in and out of the laboratory.

Fisherbrand™ reusable lab coats offer a range of options to provide flexibility and protection at a competitive price.

Available in two fit options to provide comfort in a 65/35 polycotton blend, or a unisex 100% cotton option.

Fisherbrand offers a choice of fabrics to best suit your needs. Cotton is the most common material used for lab coats as the material is lightweight, comfortable and fairly durable. Usually, lab coats can be made from cotton or a cotton/polyester blend. This is the ability to combine the best qualities of the fabric at a lower price. Cotton is breathable but wrinkles easily, so it is often combined with polyester which makes it easy to wash and wear.










- **100% cotton:** Traditional medical cotton lab coat; soft and cool. Requires ironing and may shrink slightly. Cotton can be degraded by acid and so are not always suitable for use with chemicals.
- **65% polyester/35% cotton:** The fabric has minimal shrinkage; thus no ironing is required. Polyester makes the lab coat resistant to liquid spills; cotton makes it cool and comfortable.

## Coveralls

Coveralls are loose-fitting protective clothing that work as a shield against harsh weather, chemicals, liquid splashes and sprays, dirt, grease, fire, and dust. The protection covers your body from neck to ankles as well as covering arms and shoulders.

Coveralls are usually worn over the top of clothing to protect skin and garments against a number of chemical, mechanical, thermal and biological hazards. Workers wear coveralls in many industries including pharmaceutical research, food and beverage industry, farming, mechanical industries and many more. There are also specific ranges suitable for the Cleanroom (not included in this Catalogue).

Industrial, pharmaceutical manufacturing, laboratory workers all wear disposable coveralls. There are a wide variety of protection levels for coveralls, including: liquid splashes and sprays, hazardous chemicals, dust, dry particulates, and hazardous gases. It is vital to identify the hazard before choosing the appropriate coverall (see table):

| Head to toe protection from chemicals and more                                      |                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Gas-proof:</b> fully sealed suits                                                                                                                                             |
|  | <b>Limited gas-tightness:</b> suits prevent dust, liquids and vapours from penetrating at overpressure                                                                           |
|  | <b>Liquid-proof protection:</b> suits are approved to withstand compressed fluids e.g. from hoses and nozzles                                                                    |
|  | <b>Splash proof protection:</b> suits are approved for the saturation of a liquid that can condense on the suit.<br>Type 4B protects against biologically contaminated particles |
|  | Protect against <b>harmful substances</b> . Type 5B protects against biologically contaminated particles                                                                         |
|  | <b>Limited splash-proof protection:</b> protect when there is a risk of splashing on the suit.<br>Type 6B protects against biologically contaminated particles                   |
|  | Protect against <b>biological contaminated particles</b>                                                                                                                         |
|  | Protect against <b>radioactive particle contamination</b>                                                                                                                        |
|  | <b>Electrostatic protection</b>                                                                                                                                                  |



3M™

## 4510 Protective Coveralls

- Type 5/6 Coverall designed to offer cost effective protection against hazardous dusts and limited liquid splashes.
- Protection against EN 14126 Biological agents
- Made of a soft lightweight non-woven with microporous laminate for splash protection, strength and breathability
- Certified protection against Type 5/6 hazardous dusts and limited liquid splashes

3M™ Protective Coverall 4510 offers economic protection against infective agents, certain hazardous dusts & limited liquid splashes. The PE laminate includes micropores which allow heat & moisture to evaporate from the skin and out through the suit offering a light, comfortable, protective solution.

| Cat. No. | Size     | Height                           | Pack qty |
|----------|----------|----------------------------------|----------|
| 12972315 | X-Large  | 5.83 to 6.16 ft. / 179 to 187 cm | 20       |
| 12982315 | 2X-Large | 6 to 6.33 ft. / 186 to 194 cm    | 20       |



3M™

## 4565 Protective Coveralls

- Type 4/5/6 Coverall designed to offer a very good barrier to hazardous particles and limited liquid splash and spray
- Made of bicomponent nonwoven with ultra-low linting PE laminate for a noticeably comfortable drape
- 3 panel hood, 2-way zip and storm flap with sealable tape with elasticated back and ankles to reduce the risk of skin exposure
- Taped seams across the suit for increased hold out and strength reducing the risk of tearing and exposure

3M™ Protective Coverall 4565 has desirable comfort features and provides a strong barrier to certain chemicals, liquid sprays and particles. 3M protective coverall 4565 is non-microporous to offers chemical protection with permeation tested resistance and is certified to EN 14126 infective agents.

| Cat. No. | Size    | Height                           | Pack qty |
|----------|---------|----------------------------------|----------|
| 13473336 | Large   | 5.75 to 6 ft. / 174 to 181 cm    | 20       |
| 12682595 | X-Large | 5.83 to 6.16 ft. / 179 to 187 cm | 20       |



DuPont™

## Tychem™ 4000 S Hooded Coveralls

- DuPont™ Tychem™ 4000 S. Hooded coverall available in white, in sizes SM to 3X. Elasticated face, wrists, waist and ankles for an optimal fit, thumb loops to prevent sleeves from riding up. Self-adhesive chin flap for tight seal of suit to face-mask.



Tychem™ 4000 garments are made from a lightweight, supple and durable fabric (<700g per garment) consisting of a chemical barrier film laminated to a heavy duty Tyvek™ substrate. They achieve a barrier to permeation by a broad range of inorganic and organic chemicals.

Tychem™ 4000 S is ideal for chemical handling, environmental clean-up operations and emergency response. It is suitable for use in a variety of industries, including oil and gas, chemical engineering, and for use by hazardous material response teams and other emergency services.

| Cat. No. | Size     | Seam Type | Chest Size    | Pack qty |
|----------|----------|-----------|---------------|----------|
| 15959406 | Small    | Stitched  | 84 to 92 cm   | 20       |
| 15969406 | Medium   | Stitched  | 92 to 100 cm  | 20       |
| 15979406 | Large    | Stitched  | 100 to 108 cm | 20       |
| 15989406 | X-Large  | Taped     | 108 to 116 cm | 20       |
| 15999406 | 2X-Large | Taped     | 116 to 124 cm | 20       |

DuPont™

## Tyvek™ 500 Xpert Hooded Coveralls

- Robust yet lightweight (<180g per garment)
- Elasticated face, wrists and ankles as well as glued-in waist elastic
- Ample crotch area for freedom of movement
- Large, easy-to-grasp zipper puller



Composed of flash spun high density polyethylene. Dupont™ Tyvek™ Classic Xpert Hooded Coverall is permeable to both air and water vapor, yet repels water-based liquids and aerosols and offers an excellent barrier against fine particles and fibers.

| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 12971345 | Small    | 25       |
| 12991345 | Medium   | 25       |
| 12911355 | Large    | 25       |
| 12931355 | X-Large  | 25       |
| 12951355 | 2X-Large | 25       |
| 12961355 | 3X-Large | 25       |



# Safety Starts Here

Keep your people, processes, and facilities safe.

Learn More



Safety | Protecting What Matters Most



Click on a product to access a full detailed product selection

## DuPont™

### Tyvek™ 600 Plus White Hooded Coveralls

- Self-adhesive chin strap for tight seal of suit to face mask
  - Stitched and over-taped seams for protection and strength
  - Tyvek zipper and zipper flap for enhanced protection
  - Elasticated face, wrists and ankles as well as glued-in elastic waist
- Providing an ideal balance of protection, durability and comfort. DuPont™ Tyvek™ Taped Seam Hooded Coveralls are composed of flash spun high density polyethylene.



| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 12362239 | Small    | 25       |
| 12372239 | Medium   | 25       |
| 12382239 | Large    | 25       |
| 12392239 | X-Large  | 25       |
| 12302249 | 2X-Large | 25       |
| 12312249 | 3X-Large | 25       |

## DuPont™

### Tyvek™ 500 Industry Coveralls

- With collar
  - Internal stitched seams
  - Zipper made of TYVEK™ with flap
  - Elastic cuffs, ankles and waist
- Provides an ideal balance of protection, durability and comfort. DuPont™ Tyvek™ 500 Industry Coveralls with Collar are composed of flash spun high density polyethylene.



| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 15371521 | Small    | 25       |
| 15381521 | Medium   | 25       |
| 15391521 | Large    | 25       |
| 11971731 | 2X-Large | 25       |
| 11371633 | X-Large  | 25       |
| 15301531 | 3X-Large | 25       |

## DuPont™

### Tyvek™ 200 Easysafe Hooded Coveralls

- Robust yet lightweight
- Elasticated face, wrists, waist and ankles
- Antistatic treatment on the outside
- Stitched external seams in yellow for visual identification and differentiation

Offering adequate Type 5 and 6 barrier protection and remains both air and moisture vapour permeable. DuPont™ Tyvek™ 200 Easysafe Hooded Coveralls are made from a new and unique optimized polyethylene nonwoven that is softer with a more open structure than Tyvek™ 500 and 600.



| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 15310541 | Small    | 1        |
| 15320541 | Medium   | 1        |
| 15330541 | Large    | 1        |
| 15340541 | X-Large  | 1        |
| 15350541 | 2X-Large | 1        |

## DuPont™

### Tychem™ 2000 C Hooded Coveralls

- Hooded coverall with elastic face opening
- Adhesive chin flap for tight fit around respirator
- Stitched and over-taped seams
- Soule self-adhesive zipper flap

Bright yellow color provides high visibility. Lightweight and durable fabric and a polymeric barrier coating offers good permeation barrier protection against a wide range of inorganic chemicals and biological hazards (even under pressure).



| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 12648341 | Small    | 25       |
| 12658341 | Medium   | 25       |
| 11733093 | Large    | 25       |
| 11743093 | X-Large  | 25       |
| 11753093 | 2X-Large | 25       |

## DuPont™

### Tychem™ 6000 F CHA5 Hooded Coveralls

- Available in grey for discretionary needs
- Elasticated face, wrists, waist and ankles for optimal fit
- Thumb loops prevent sleeves from riding up
- Self-adhesive chin flap for tight seal of suit to face masks

Offering excellent chemical permeation protection to an extensive range of chemicals. DuPont™ Tychem™ 6000 F Hooded Coveralls are made from a lightweight and durable fabric consisting of a proprietary barrier film-laminated to a heavy duty Tyvek substrate.



| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 12623680 | Small    | 25       |
| 12613680 | Medium   | 25       |
| 11793083 | Large    | 25       |
| 11713093 | 2X-Large | 25       |
| 11703093 | X-Large  | 25       |
| 12603680 | 3X-Large | 25       |

DuPont™

Tyvek™ 400 Dual Hooded Coveralls

- Coverall with 3-piece hood
- Tyvek™ at the front and large breathable SMS back
- Stitched external seams
- Elasticated wrists, ankles and face

Provides an ideal balance of protection, durability and comfort. DuPont™ Tyvek™ 400 Dual Hooded Coverall is permeable to both air and water vapour, yet repels water-based liquids and aerosols. It offers an excellent barrier against fine particles and fibres down to 1 micron in size.



| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 15348354 | Small    | 100      |
| 15358354 | Medium   | 100      |
| 15368354 | Large    | 100      |
| 15378354 | X-Large  | 100      |
| 15388354 | 2X-Large | 100      |

DuPont™

Tyvek™ 500 Laboratory Coats, No Pockets

- Silicon non-added
- With 5 press stud closures
- Elasticated cuffs (not tunnelled)
- Stitched internal seams

Offers enhanced protection for body parts that are more exposed to hazardous substances. DuPont™ Tyvek™ 500 Lab Coat with Press Studs are composed of flash spun high density polyethylene, providing an ideal balance of protection, durability and comfort.



| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 12392259 | Large    | 10       |
| 12312269 | 2X-Large | 10       |

DuPont™

Tyvek™ 500 Labo Hooded Coveralls

- Excellent barrier against fine particles and fibres
- Ultra-low-linting and antistatically treated
- Tyvek zipper and zipper flap for enhanced protection
- Composed of flash spun high density polyethylene

Providing an ideal balance of protection, durability and comfort. DuPont™ Tyvek™ CHF7 Hooded Laboratory Coveralls are robust yet lightweight with a 3-piece hood and gusset for improved fit.



| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 11753113 | Small    | 25       |
| 11743113 | Medium   | 25       |
| 11713113 | Large    | 25       |
| 11723113 | X-Large  | 25       |
| 11733113 | 2X-Large | 25       |
| 11763113 | 3X-Large | 25       |

DuPont™

Tyvek™ 500 Trousers

- Flash-spun HDPE construction
- Elasticated waist
- Stitched seams
- No pockets

Composed of flash spun high density polyethylene. DuPont™ Tyvek™ 500 Trousers offer an excellent barrier against fine particles and fibres down to 1 micron in size.



| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 12603700 | Medium   | 50       |
| 11743123 | Large    | 50       |
| 12623690 | X-Large  | 50       |
| 12693690 | 2X-Large | 50       |

DuPont™

Tyvek™ 500 White Overboots

- Fixation ties
- With elasticated top and stitched internal seams
- Permeable to both air and water vapour, yet repels water-based liquids and aerosols
- Excellent barrier against fine particles and fibres (down to 1 micron in size), is ultra-low-linting and antistatically treated

Offers enhanced protection for body parts that are more exposed to hazardous substances. DuPont™ T500 Boot Covers are composed of flash spun high density polyethylene, providing an ideal balance of protection, durability and comfort.



| Cat. No. | Pack qty |
|----------|----------|
| 11763083 | 200      |

DuPont™

Tyvek™ 500 Boot Covers with Antislip Sole

- Knee-length overboot available in white
- One size
- Elasticated top and fixation ties
- Stitched internal seams

Specially designed for use with Tyvek™ apparel. DuPont™ Tyvek™ 500 Boot Covers with Antislip Sole offer enhanced protection for body parts that are more exposed to hazardous substances.



| Cat. No. | Pack qty |
|----------|----------|
| 11803510 | 200      |



# Apparel

## DuPont™

### Tychem™ 6000 Grey Overboots

- Fixation ties
- Antistatic treatment
- Sole is partially stitched
- With slip-retardant sole

Offers enhanced protection for body parts that are more exposed to hazardous substances. DuPont™ Tychem™ 6000 F Boot Covers are made from a lightweight and durable fabric consisting of a proprietary barrier film laminated to a heavy duty Tyvek substrate.



| Cat. No. | Pack qty |
|----------|----------|
| 11783524 | 50       |

## DuPont™

### Tyvek™ 500 White Overshoes

- With elasticated ankle and stitched internal seams
- Permeable to both air and water vapour, yet repels water-based liquids and aerosols
- Excellent barrier against fine particles and fibres (down to 1 micron in size), is ultra-low-linting and antistatically treated
- Applications include pharmaceutical handling, chemical protection, lead and asbestos abatement/remediation, general maintenance/operations, spray painting and general clean-up

Offers enhanced protection for body parts that are more exposed to hazardous substances. DuPont™ Tyvek™ POSA White Overshoes are composed of flash spun high density polyethylene, providing an ideal balance of protection, durability and comfort.



| Cat. No. | Pack qty |
|----------|----------|
| 11773113 | 200      |

## DuPont™

### Tyvek™ 500 Shoe Covers with Antislip Sole

- Slip-retardant sole
- Stitched internal seams
- Elastication
- White

Composed of flash spun high density polyethylene. DuPont™ Tyvek™ 500 Shoe Cover with Antislip Sole protects against fine particles and fibers down to 1 micron in size.



| Cat. No. | Pack qty |
|----------|----------|
| 11793113 | 200      |

## DuPont™

### Tyvek™ 500 Sleeves

- Flash-spun HDPE construction
- Stitched internal seams
- Elastic openings.
- Blue stitches on upper arm.

Specially designed for use with Tyvek™ apparel. DuPont™ Tyvek™ 500 Sleeves offer enhanced protection for body parts that are more exposed to hazardous substances.



| Cat. No. | Pack qty |
|----------|----------|
| 11723073 | 200      |

## DuPont™

### Tyvek™ 500 Laboratory Coats, No Pockets

- Silicon non-added
- With 5 press stud closures
- Elasticated cuffs (not tunnelled)
- Stitched internal seams

Offers enhanced protection for body parts that are more exposed to hazardous substances. DuPont™ Tyvek™ 500 Lab Coat with Press Studs are composed of flash spun high density polyethylene, providing an ideal balance of protection, durability and comfort.



| Cat. No. | Pack qty |
|----------|----------|
| 12302269 | 10       |

## DuPont™

### Tyvek™ PL30NP Collared Laboratory Coats

- Silicon non-added
- With 5 press stud closures
- Elasticated cuffs (not tunnelled)
- Stitched internal seams

Offers enhanced protection for body parts that are more exposed to hazardous substances. DuPont™ Tyvek™ PL30NP Collared Laboratory Coats are composed of flash spun high density polyethylene, providing an ideal balance of protection, durability and comfort.



| Cat. No. | Pack qty |
|----------|----------|
| 12382259 | 10       |



## DuPont™

### Tychem™ 2000 C Sleeves

- Antistatic treatment
- Wide elastics at cuffs and upper arm
- Utilizes the strength of Tyvek and a polymeric barrier coating to offer good permeation barrier protection against a wide range of inorganic chemicals and biological hazards (even under pressure)
- Used for splash or pressurized splash protection in a variety of industrial environments, including pulp and paper manufacturing, food processing, chemical processing and pharmaceutical manufacturing



Offers enhanced protection for body parts that are more exposed to hazardous substances. DuPont™ Tychem™ C Sleeves come with stitched and over-taped seams with barrier tape for protection and strength.

| Cat. No. | Pack qty |
|----------|----------|
| 11322854 | 50       |

## DuPont™

### Tychem™ 6000 F Sleeves

- Antistatic treatment
- Wide elastics at cuff and upper arm
- Excellent chemical permeation protection to an extensive range of chemicals, helping to protect personnel against numerous toxic industrial organic chemicals, highly concentrated inorganic chemicals (even under pressure), particulates, biohazards and certain chemical warfare agents
- Used for a broad range of applications from chemical spill clean-up, emergency response, to military and petrochemical applications



Offers enhanced protection for body parts that are more exposed to hazardous substances. DuPont™ Tychem™ 6000 F Sleeves come with stitched and over-taped seams for protection and strength.

| Cat. No. | Pack qty |
|----------|----------|
| 11905864 | 50       |

## DuPont™

### Tychem™ 2000 C Yellow Aprons

- Shin length
- With neck and waist ties
- Antistatic treatment
- Applications include splash or pressurized splash protection in a variety of industrial environments, including pulp and paper manufacturing, food processing, chemical processing and pharmaceutical manufacturing



Offers enhanced protection for body parts that are more exposed to hazardous substances. DuPont™ Tychem™ 2000 C Aprons utilize the strength of Tyvek and a polymeric barrier coating to offer permeation barrier protection against a wide range of inorganic chemicals and biological hazards.

| Cat. No. | Pack qty |
|----------|----------|
| 12673680 | 25       |

## DuPont™

### Tychem™ 6000 F Grey Aprons

- With neck and waist ties
- Antistatic treatment
- Excellent chemical permeation protection to an extensive range of chemicals
- Helps to protect personnel against numerous toxic industrial organic chemicals, highly concentrated inorganic chemicals (even under pressure), particulates, biohazards and certain chemical warfare agents



Offers enhanced protection for body parts that are more exposed to hazardous substances. DuPont™ Tychem™ 6000 F Aprons are made from a lightweight and durable fabric consisting of a proprietary barrier film laminated to a heavy duty Tyvek substrate.

| Cat. No. | Pack qty |
|----------|----------|
| 12683680 | 25       |

## DuPont™

### Tychem™ 2000 C Boot Covers

- Partially stitched, partially taped
- Slip-retardant sole
- Knee-length with fixation ties
- Yellow



Knee-length slip-retardant overboot with ties and elastic offers enhanced protection for body parts that are more exposed to hazardous substances.

| Cat. No. | Pack qty |
|----------|----------|
| 11382844 | 50       |

## Fisherbrand™

### Tyvek™ Cat III Hooded Coveralls

- Offers more protection than equivalent SMS garments
- More robust than microporous films
- Robust yet lightweight (less than 180 g/garment)
- Elasticated face, wrists, waist and ankles



Fisherbrand Tyvek™ Cat III Hooded Coveralls made from a soft polyethylene nonwoven fabric, offering a great balance of protection and comfort. Providing adequate Type 5 and 6 barrier protection, they remain both air and moisture vapour permeable.

| Cat. No. | Size     | Pack qty |
|----------|----------|----------|
| 16396515 | Small    | 1        |
| 16306525 | Medium   | 1        |
| 16316525 | Large    | 1        |
| 16326525 | X-Large  | 1        |
| 16336525 | 2X-Large | 1        |
| 16346525 | 3X-Large | 1        |



# Apparel

## Fisherbrand™

### Women's Poly/Cotton Lab Coats

- Made of 65/35 Polycotton
- One outside left breast pocket, two outside lower pockets
- Standard pointed collar
- Front button closure

Generously sized for comfort with a belted back



| Cat. No. | Size     | Length   | Pack qty |
|----------|----------|----------|----------|
| 15807101 | X-Small  | 37.0 in. | 1        |
| 15817101 | Small    | 37.8 in. | 1        |
| 15827101 | Medium   | 38.6 in. | 1        |
| 15837101 | Large    | 39.4 in. | 1        |
| 15847101 | X-Large  | 40.2 in. | 1        |
| 15857101 | 2X-Large | 40.9 in. | 1        |
| 15867101 | 3X-Large | 41.7 in. | 1        |

## Fisherbrand™

### Men's Poly/Cotton Lab Coats

- Made of 65/35 Polycotton
- One outside left breast pocket, two outside lower pockets
- Standard pointed collar
- Front snap closure

With Front gripper closures



| Cat. No. | Size     | Length   | Pack qty |
|----------|----------|----------|----------|
| 15817091 | Small    | 42.5 in. | 1        |
| 15827091 | Medium   | 43.3 in. | 1        |
| 15837091 | Large    | 44.1 in. | 1        |
| 15847091 | X-Large  | 44.9 in. | 1        |
| 15857091 | 2X-Large | 45.7 in. | 1        |
| 15867091 | 3X-Large | 46.5 in. | 1        |

## Fisherbrand™


### Unisex Cotton Lab Coats

- Made of 100% cotton
- One outside left breast pocket, two outside lower pockets
- Standard pointed collar
- Front snap closure

Open cuffs provide comfortable and unrestrictive fit



| Cat. No. | Size     | Length   | Pack qty |
|----------|----------|----------|----------|
| 15887101 | Small    | 44.1 in. | 1        |
| 15897101 | Medium   | 44.9 in. | 1        |
| 15807111 | Large    | 45.7 in. | 1        |
| 15827111 | 2X-Large | 47.2 in. | 1        |
| 15837111 | 3X-Large | 48.0 in. | 1        |

 fisher scientific

# Safety Starts Here

Keep your people, processes, and facilities safe.

[Learn More](#)



Safety | Protecting What Matters Most



# FACILITY SAFETY AND MAINTENANCE

Working in laboratory environments require the highest degree of conscientiousness, expertise and high-quality products to guarantee facility safety. Such products include, but are not limited to, cleaning and spill kits and disinfectant wipes. These products are required to perform regularly scheduled safety and maintenance activities, ensuring proper operation and conditions within spaces, structures and infrastructures.

Here are the top product categories:

## Spillage Control

When spills happen, you need to act fast to protect yourself and prevent damage within your laboratory, facility, the environment, and your reputation. The spillage control range includes a great variety of products to choose from, depending on your requirements. It offers everything you need to protect yourself and the environment, by soaking up anything that spills. So, don't worry if you spill something, get immediate help to absorb or control spills in emergency situations.

## Cleaning Tasks

Whenever you need to wipe, dry or clean, we take care of it. Our range of products can protect your processes and your people needs in and out of laboratories.

## Disinfectants

We offer a wide range of products designed to help for your cleaning and disinfection tasks in laboratories. From products used to disinfect and deodorize hard and non-porous surfaces, available as liquid solutions, sprays and wipes to active cleaning agents for laboratory, medical and industrial applications.



**F** fisher scientific  
**Safety Starts Here**  
Keep your people, processes, and facilities safe.

[Learn More](#)

 Safety | Protecting What Matters Most



# Facility Safety and Maintenance

## Decon™

### Decomatic Washing Machine detergent

Biodegradable, phosphate, enzyme and chlorine free, suitable for automatic washing machines.

By preventing the deposition of lime and salts on both contents and machine parts, it minimises corrosion and wear of seals, pumps, racks and stainless steel surfaces, thereby providing more efficient performance and longer life to the machine.



| Cat. No. | Pack qty |
|----------|----------|
| 10538610 | 10LT     |

## Decon™

### Decon 90 Cleaning Agent/Decontaminant

Biodegradable, phosphate and enzyme free, water rinsable surface active cleaning agent and radioactive decontaminant.

A 2% to 5% solution is adequate for the majority of cleaning applications.



| Cat. No. | Pack qty |
|----------|----------|
| 10335650 | 1LT      |
| 10549760 | 5LT      |

## Decon™

### Neutracon Cleaning Agent/Decontaminant

Biodegradable, phosphate, enzyme and chlorine bleach free, near-neutral liquid surface-active agent.

Completely soluble in water and will not deposit calcium and magnesium or precipitate iron.



| Cat. No. | Pack qty |
|----------|----------|
| 10355650 | 1LT      |
| 10253710 | 5LT      |

## Decon™

### Acid Rinse Neutraliser/Prewash

Ideal for use as a pre-wash for heavy soiling or as an acid rinse to remove all detergent traces from apparatus and prevent the deposition of metal salts. Not suitable for domestic use. Formulated from a blend of polycarboxylic acids, aliphatic alcohols and non-ionic surfactants in an aqueous base and is totally water rinsable.

Because of its acidic nature, not suitable for non-ferrous metals, polycarbonate plastics, aluminium or zinc.



| Cat. No. | Pack qty |
|----------|----------|
| 10273420 | 5LT      |

## Decon™

### Decon 75 Laboratory Detergent

- Liquid concentrate (for dilution with water)
- Biodegradable
- Bactericidal
- Non-flammable

Phosphate surfactant surface active cleaning agent. Decon Laboratories™ Decon 75 Laboratory Detergent can be used for radioactive decontamination.



| Cat. No. | Pack qty |
|----------|----------|
| 12328955 | 5LT      |

## Bollé Safety™

### B-Clean™ Lens Cleaning Products/Kits

- Alcohol and silicone free
- Water-based formula guarantees a perfect cleaning and protection for your spectacles and goggles

B-Clean™ Bollé Safety™ range of cleaning solutions guarantees optimum cleaning. Alcohol and silicone free, its water-based formula guarantees a perfect cleaning and protection for your spectacles and goggles.



| Cat. No. | Product Type                             | Pack qty |
|----------|------------------------------------------|----------|
| 12659110 | B410 Cleaning Station                    | 1        |
| 12689100 | B200 Anti-Fog Kit                        | 30ML     |
| 15382184 | B250 Anti-Fog Spray                      | 500ML    |
| 12659230 | B401 Multi-Function Dry Cleaning Tissues | 200      |
| 12669110 | B411 Lens Cleaner Spray                  | 250ML    |
| 12699090 | B100 Premoistened Tissue Dispenser       | 100      |

## Berkshire™

### Durx™ 670 General Purpose Wipes

- Manufactured without the use of binders or surfactants, ion levels and organic extractables remain low
- The same wipe material can be provided in pre-wetted formats for reduced VOC emissions, increased convenience, increased productivity, improved solvent control and cleaning protocol repeatability and reduced costs
- For aseptic processing areas, the same wipe material can be provided in a gamma irradiated format, validated sterile to a 10<sup>-6</sup> sterility assurance level
- Dry and pre-wetted versions available


Use these wipes for cleaning and maintenance in laboratories as well as aerospace and defense, microelectronics, food processing, pharmaceutical and biomedical device manufacturing environments. Berkshire™ Durx™ 670 General Purpose Wipes feature exceptional strength and absorbency.



| Cat. No. | Pack qty |
|----------|----------|
| 12877143 | 300      |

## PURUS™

### 30-Layer EnviroTack™ Contamination Control Mats

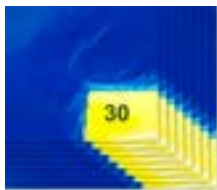

- Eco-friendly containing a proprietary GMO free, plant based renewable material that reduces CO<sub>2</sub> emissions during the manufacturing process
- Strong and Effective delivering reliable and high-end performance
- Consistent adhesive coverage for maximum performance of each layer
- Can be recycled in conventional plastic recycling streams or through Fisher Scientific's partnership with PURUS™ and Terra Cycle
- Low profile numbered tabs ensure one-sheet-at-a-time removal and indicate number of remaining layers

Exclusively from PURUS™, EnviroTack™ mats are the first ever contamination control products that contain GMO free, plant-based renewable materials, providing an environmentally friendly alternative to removing dirt and dust from foot traffic and equipment wheels

| Cat. No. | Color | Pack qty |
|----------|-------|----------|
| 13410329 | Blue  | 8        |
| 13400329 | White | 8        |

## Fisherbrand™ Clean-Wipes™

- Cellulose and polyester blend cloth is soft and lint-free; will not scratch surfaces or fall apart like paper wipes
- Reclosable container dispenses single wipes, eliminates contamination from dust and dirt

Cellulose and polyester blend cloth is soft and lint-free; will not scratch surfaces or fall apart like paper wipes.



| Cat. No. | Product Type                         | Saturation Solution                                              | Pack qty |
|----------|--------------------------------------|------------------------------------------------------------------|----------|
| 11754346 | Premoistened Alcohol/DI Clean-Wipes™ | Pure reagent-grade 70% isopropyl alcohol and 30% deionized water | 100      |
| 11744346 | Dry Clean-Wipes™                     | N/A                                                              | 100      |
| 12972780 | Premoistened DI Clean-Wipes™         | 100% pure deionized water                                        | 100      |

## Kimberly-Clark™ Kimtech Science™ Precision Wipes

- For delicate equipment, surfaces, optics and materials, our low-lint and high absorbency white wipes have you covered
- Light duty, white-colored wipes made from 100% pure fiber
- Provided in a hygienic, user-friendly pop-up box
- Low-lint absorbency for delicate applications and surfaces

Low-lint, high absorbency and chemically inert wipes for delicate tasks and instrumentation in a range of applications. The 1-ply white-coloured wipes are provided in a convenient pop-up box and are anti-static.

| Cat. No. | Length  | Width   | Pack qty |
|----------|---------|---------|----------|
| 11768188 | 31 cm   | 28.5 cm | 15       |
| 12660543 | 31 cm   | 28.5 cm | 196      |
| 17445653 | 20.8 cm | 11.2 cm | 286      |



## Kimberly-Clark™

### Kimtech™ Process Wipers

- Ideal for repeated, lint-free cleaning with chemicals and solvents
- Designed for specific tasks in controlled areas. Kimberly Clark™ KIMTECH™ Process Wipers are ideal for repeated, lint-free cleaning.



| Cat. No. | Dimensions (L x W) | Ply   | Color | Pack qty |
|----------|--------------------|-------|-------|----------|
| 10748444 | 38 x 34 cm         | 1-Ply | White | 1        |
| 10531163 | 30.7 x 42.6 cm     | 2-Ply | Blue  | 160      |

## Kimberly-Clark™

### Kimtech Science™ Delicate Task Wipes, White



Wipe liquids with multi-ply absorbency and low lint content for intricate dusting. Kimberly Clark™ Kimtech Scientific™ Delicate Task Wipers are ideal for cleaning delicate glassware, instruments, and surface/parts.

A range of high-performance wipers, suitable for ISO Class 4 or higher laboratory environments.

Ideal for: cleaning of delicate glassware, instruments and surface/parts; wiping liquids, with multi-ply absorbency and low lint content for intricate dusting.

| Cat. No. | Pack qty |
|----------|----------|
| 15405840 | 24       |

## Kimberly-Clark™

### Kimtech Science™ Delicate Task Wipes



- Ideal for cleaning of delicate glassware, instruments and surface/parts
- With multi-ply absorbency and low lint content for intricate dusting
- Dispensed from a POP-UP Box flexible system, for hygiene and controlled access

Provides high-performance cleaning in the laboratory. Kimberly-Clark™ Kimtech Science™ Delicate Task Wipes are suitable for ISO Class 4 or higher laboratory environments.

| Cat. No. | Pack qty |
|----------|----------|
| 15402680 | 15PK     |





# Facility Safety and Maintenance

## Kimberly-Clark™

### Kimtech™ Cleaning Wipers, Large Roll, White



- High-performance wiper suitable for ISO Class 4 or higher cleanroom environments.
- Ideal for dry wiping of critical equipment and surfaces in pharmaceutical, high-tech biotechnology, medical device industries and food processing industries.
- Available as white, 1-ply, large perforated roll for use in busy areas.
- Can be used with a range of mobile or mounted dispensing systems to help control use and reduce wastage.

High-performance wiper solution for ISO Class 4 or higher cleanroom environments. Kimberly-Clark™ White Kimtech Cleaning Wiper is ideal for pharmaceutical, high-tech biotechnology, medical device industries, and food processing industries.

| Cat. No. | Pack qty |
|----------|----------|
| 10223723 | 1ROLL    |

## Kimberly-Clark™ Professional™

### Kimtech™ Cleaning Wipes



- White
- 1-ply
- Quarter-folded

Use these cloths for dry wiping of critical equipment and surfaces. Kimberly-Clark Professional™ KIMTECH PURE™ Cleaning Wipes are ideal for pharmaceutical, high-tech biotechnology, medical device industries and food processing industries.

| Cat. No. | Pack qty |
|----------|----------|
| 11872150 | 12       |

## Kimberly-Clark™

### WypAll™ L10 Food and Hygiene Wiping Paper



- Designed for the specific environments where they will be used, helping enable you to deliver on your wiping task every time.
- These compact disposable paper wipes are 1 ply and designed for light duty wiping in areas such as food preparation and service surfaces
- The compact design of this wiping paper is designed to be small, portable and easy to handle
- This format's ease of use helps to support hygiene standards and compliance while also saving space

Designed for light duty hygiene wiping and perfect for tasks like cleaning food preparation and service surfaces. The embossing technology of these paper wipes delivers a great balance of performance and value. Help break the chain of germ transmission.

| Cat. No. | Color | Pack qty |
|----------|-------|----------|
| 16378338 | Blue  | 24ROLL   |
| 16388338 | White | 24ROLL   |

## Kimberly-Clark™

### WypAll™ L40 Fabric Wipers



- Large, perforated roll for use in busy areas
- Can be used with a dispensing system to help control use and reduce waste

Use these wipers for industrial tasks such as cleaning, process line wiping and soaking up large spills. Kimberly-Clark™ WypAll™ L40 Paper Wipers are made from a specialized fabric, featuring double re-creped (DRC) base sheet technology for the a perfect balance of softness and strength.

| Cat. No. | Pack qty |
|----------|----------|
| 10627645 | 18       |

## Kimberly-Clark™

### WypAll™ L30 ULTRA Wipes



- 3-ply
- Single use
- Supplied on a large perforated roll
- For use in high traffic areas

3-ply single use wipe manufactured from AIRFLEX™ fabric technology. Kimberly-Clark™ WypAll™ L30 ULTRA Wipes are stronger than conventional 3-ply wipes.

| Cat. No. | Pack qty |
|----------|----------|
| 10006731 | 1        |

## Kimberly-Clark™

### WypAll™ L20 Cleaning and Maintenance Wiping Paper, Compact Roll



- Designed for the specific environments where they will be used, to deliver on your wiping task, every time.
- These blue, 2 ply, single use Cleaning and Maintenance Compact Rolls are versatile, small, easy to handle and designed for a variety of wiping tasks
- They are perfect for tool and parts clean-up in process and maintenance environments
- Our embossing technology delivers a great balance of performance and value

Designed for versatile cleaning and wiping in production and maintenance environments, and perfect for tool and parts clean up. Embossing technology delivers a great balance of performance and value. Compatible with WypAll™ small roll dispenser 7041.

| Cat. No. | Pack qty |
|----------|----------|
| 16318348 | 24ROLL   |

## Day Impex™ Virkon™ Virucidal Disinfectant



- Use biocides safely. Always read the label and product information before use
- Widest proven spectrum of any disinfectant - proven effective in independent tests against all 18 virus families affecting man and animals, including AIDS (HIV) and Hepatitis B
- Excellent bactericide and fungicide - cleans and disinfects work surfaces and equipment in a single, one-step operation
- Can be applied in powder form direct to spillages of blood and other body fluids

Clean and disinfect work surfaces and equipment in a single, one-step operation. Day Impex™ Virkon™ Virucidal Disinfectant provides the widest proven spectrum of any disinfectant.

| Cat. No. | Container Type | Volume | Packaging Quantity | Pack qty |
|----------|----------------|--------|--------------------|----------|
| 12338667 | Sachet         | 50 g   | 50/Pk.             | 50       |
| 12348667 | Squeeze Pack   | 500 g  | 6/Pk.              | 6        |
| 12358667 | Drum           | 5 kg   | 1                  | 5KG      |

## Day Impex™ Virkon™ Virucidal Disinfectant Tablets



- Use biocides safely. Always read the label and product information before use.
- Widest proven spectrum of any disinfectant - proven effective in independent tests against all 18 virus families affecting man and animals, including AIDS (HIV) and Hepatitis B
- Excellent bactericide and fungicide - cleans and disinfects work surfaces and equipment in a single, one-step operation
- Can be applied in powder form direct to spillages of blood and other body fluids

Clean and disinfect work surfaces and equipment in a single, one-step operation. Day Impex™ Virkon™ Disinfectant Virucidal Tablets provide the widest proven spectrum of any disinfectant.

| Cat. No. | Packaging Quantity          | Pack qty |
|----------|-----------------------------|----------|
| 12328667 | 200 (20 tubs of 10 tablets) | 200TAB   |
| 12318667 | 600 (12 tubs of 50 tablets) | 600TAB   |

## PAL International™ Medipal™ Medical Disinfectant Wipes



- They contain a powerful dual biocidal solution, highly effective from 30 seconds against a wide range of pathogenic microorganisms and are intended for cleaning and disinfecting surfaces of non invasive medical devices
- Medipal™ Disinfectant Wipes are bactericidal (including TB), virucidal, yeasticidal and fungicidal
- They are tested to a range of EN standards including EN13727, EN14476, EN14348, EN14561, EN14563
- They are alcohol free and gentle on surfaces, making them suitable for everyday use

Supports healthcare institutions to achieve both their clinical and budgetary targets. Using Medipal™ wipes will help infection prevention teams to fight infection and ensure healthy, clinically clean environments for patients.

| Cat. No. | Pack qty |
|----------|----------|
| 15824165 | 200      |

## PAL International™ Medipal™ 3 in 1 Disinfectant Wipes



- Developed in response to a growing clinical need for a single cleaning & disinfectant wipe that is effective against a wider range of pathogens including spores
- It uses a new, high specification combination chemistry, effectively blending two disinfectant compounds, DDAC and Triamine, to produce a highly efficacious, broad spectrum disinfectant effective against spores
- Wipes are alcohol free and intended for cleaning and disinfecting non porous hard surfaces, equipment and non invasive medical devices within healthcare environments
- Proven to kill most micro organisms such as spores, bacteria, viruses & yeasts

2.0 L canister with 240 disinfectant wipes

| Cat. No. | Pack qty |
|----------|----------|
| 15834165 | 240      |

## Synergy Healthcare™ Azowipe™ Hard Surface Disinfecting Wipes



- 70% Isopropyl alcohol disinfectant
- Broad spectrum activity against a range of micro-organisms
- Extremely fast contact times from 15 seconds
- Non-smearing and streak-free when used on hard surfaces.

Provides rapid disinfection of hard surfaces. Synergy Healthcare™ Azowipe™ Hard Surface Disinfectant Wipes are non-smearing, strong and durable for everyday use.

| Cat. No. | Pack qty |
|----------|----------|
| 15649795 | 200      |



# Facility Safety and Maintenance

## Thermo Scientific™

### RNase AWAY™ Surface Decontaminant

- Use on pipettes, gel boxes, or RNA or DNA prep areas
- Leaves no residue to interfere with gel polymerization or staining
- Chemically stable and nonabrasive
- Contains no strong acids

Eliminate RNase and DNA from laboratory surfaces. This product reduces dependency on carcinogenic DEPC treatments and saves time spent baking glassware.



| Cat. No. | Container Type | Size            | Pack qty |
|----------|----------------|-----------------|----------|
| 11580095 | Bottle         | 250mL (8.5 oz.) | 250ML    |
| 10666421 | Spray Bottle   | 475mL (16 oz.)  | 475ML    |

## Thermo Scientific™

### DNA AWAY™ Surface Decontaminant

- Suitable for gel boxes, pipettes, benchtops, thermal cyclers, or other apparatus
- Use before performing PCR or working with DNA for a DNA-free work area
- Simply apply the ready-to-use formula to the surface to decontaminate, then wipe dry or rinse clean

Eliminate unwanted DNA and DNase from glassware and plasticware without affecting subsequent DNA samples. This surface decontaminant degrades DNA more quickly and effectively than autoclaving.



| Cat. No. | Pack qty |
|----------|----------|
| 10223471 | 250ML    |

## 3M™

### Standard Chemical Sorbents

- Sorbents are dirt- and dust-free; contain no abrasive granules that can damage expensive equipment
- Polypropylene base is chemically inert and incinerable; allows separation and recycling in many applications
- Easy-to-spot yellow cartons protect sorbents from temperature and humidity for secure, long-term storage
- Convenient dispenser boxes—suitable for tabletops or wall mounting—keep pads and pillows within easy reach Pads or pillows are ideal for use on work surfaces and can be trimmed to size

Absorb virtually any liquid with these chemical sorbents.



| Cat. No. | Model | Capacity        | Type                       | Pack qty |
|----------|-------|-----------------|----------------------------|----------|
| 12342459 | P200  | 45.4 L /12 gal. | Chemical Sorbent Mini Boom | 12       |
| 12332459 | P300  | 30.3 L/8 gal.   | Chemical Sorbent Pillow    | 16       |
| 10685315 | P110  | 64.3 L/17 gal.  | Chemical Sorbent Pad       | 200      |

## 3M™

### M-N1001 Maintenance Sorbent Pillows

- Use in areas where greater capacity is required to catch leaks and drips
- Promotes a cleaner, safer working environment
- For use on most non-aggressive liquids
- Very easy to use and to retrieve

Designed with a scrim that encases particulate sorbent material. Use in areas where greater capacity than a sorbent pad is desired. Pillows are small, lightweight, and tear resistant.



| Cat. No. | Pack qty |
|----------|----------|
| 17148600 | 16       |

## 3M™

### Chemical Absorbent Rolls

- Provides large area coverage
- Suitable for a wide range of liquids
- High absorption capacity minimizes amount of waste

Relatively inert and powerful enough to handle dilute acids, bases, solvents, oils and many other hazardous liquid spills. 3M™ Chemical Absorbent Rolls are flexible enough to be adapted to a wide range of sizes.



| Cat. No. | Pack qty |
|----------|----------|
| 12352459 | 2        |

## Fisherbrand™

### Universal Absorbent Roll

- One sided spunbound offers durability and low lint on one side
- Multiple perforations for ease of use and to minimize waste
- Multi-use maintenance sorbent that can be used in five different ways
- Soc to catch leaks and drips around machines

Fisherbrand™ Universal Absorbent Roll absorbs industrial liquids including oils, water, solvents and coolants



| Cat. No. | Pack qty |
|----------|----------|
| 15843720 | 1        |

## Fisherbrand™

### Chemical Absorbent Pads

- One sided spunbound gives extra strength as well as less lint
  - Does not degrade or cause a dangerous chemical reaction with the absorbed liquid
  - Green color alerts workers that the product is being used for hazardous liquids and allows the user to identify and separate hazardous waste for disposal, resulting in lower disposal costs
  - Perforated for more flexibility - use only what you need and minimize waste
- Fisherbrand™ Chemical Absorbent Pads absorb chemicals and hazardous liquids



| Cat. No. | Pack qty |
|----------|----------|
| 15853720 | 100      |

## Fisherbrand™

### Oil Only Sorbent Pads

- Lower disposal costs - less material is needed to absorb the same amount of oil
- Lower lint and more abrasion resistance
- Ideal for environmental and industrial applications where low cost and high adsorbency are required



Oil-only sorbent pads are 1-ply, white, light weight, oil only sorbent pad that absorbs oil and petroleum based liquids. The pads repel water and float indefinitely, even when saturated.

| Cat. No. | Pack qty |
|----------|----------|
| 15883720 | 200      |

## Fisherbrand™

### Chemical Sorbent Roll

- Does not degrade or cause a dangerous chemical reaction with the absorbed liquid
- Green colour alerts workers the product is used for hazardous liquids
- Green colour also allows user to identify and separate hazardous waste for disposal
- Perforated down the middle and cross-wise permit the use of precisely the right amount of material - reduces waste



Sorbent rolls are 2-ply, green, medium weight, bonded and double perforated chemical sorbent rolls that absorb chemicals and hazardous liquids. One sided spunbound gives extra strength as well as less lint.

| Cat. No. | Pack qty |
|----------|----------|
| 15863720 | 2        |

## Fisherbrand™

### Chemical Sorbent Pads, High Visibility

- Yellow colour for high visibility
- 3-ply pads
- Perforated on centreline for dividing in half - reduces waste
- Does not react with aggressive fluids



Yellow colour-coded sorbent pads are highly visible for safety and easy separation of hazardous waste.

| Cat. No. | Pack qty |
|----------|----------|
| 15893720 | 100      |

## Fisherbrand™

### Chemical Sorbent Particulate

- Ideal for oil clean up on open water and land applications
- Fibrous sorbent for non-aggressive spills of oil based or solvent based liquids
- Compressed bale pack
- Loose fibrous peat moss structure



Absorbs quickly, thanks to its fast wicking action. Encapsulates spills on contact.

| Cat. No. | Pack qty |
|----------|----------|
| 15873720 | 1        |

## Fisherbrand™

### Chemical Sorbent Socs

- Strong wicking action: absorption begins immediately after contact with spilled liquid
- No need to turn the soc
- Flexible design allows soc to fit around any machine, corner or curve
- Ideal for containing and absorbing leaks and spills



Chemical sorbent socs absorb chemicals and hazardous liquids. Strong wicking action, absorption begins instantly with no need to turn the soc.

| Cat. No. | Pack qty |
|----------|----------|
| 15803730 | 12       |



# Facility Safety and Maintenance

Fisherbrand™

## Chemical Sorbent Pillow

- Green polypropylene filling
- Ideal for spills and leaking fluids, or under persistent drip sources
- Perfect for use in small or hard to reach areas

A chemical sorbent pillow filled with green polypropylene that absorbs chemicals and hazardous liquids. Ideal for absorbing spills and leaking fluids in tight spaces or under persistent drip sources.



| Cat. No. | Pack qty |
|----------|----------|
| 15813730 | 32       |

Fisherbrand™

## Acid Neutralizing Chemical Specialty Spill Kit

- Contains chemical neutralizing polymers
- Includes color change indicator that reflects neutralization

Spill kit containing chemical neutralizing polymers, which provide safe spill control.



| Cat. No. | Pack qty |
|----------|----------|
| 16543852 | 1SET     |

Fisherbrand™

## Base Neutralizing Chemical Specialty Spill Kit

- Allows you to be prepared should a spill occur
- Combines pads, accessories, and PPE

Spill kit combining pads, accessories, and PPE so that you are prepared in an emergency.



| Cat. No. | Pack qty |
|----------|----------|
| 16553852 | 1SET     |

Fisherbrand™

## Chemical Spill Kit, Absorption Capacity 37L

- Portable spill kit
- Designed for small spillages
- Durable see-through bag with shoulder strap - easy to check spill response supplies
- Quick and easy access ensures a quick response, thanks to a zipper opening up the entire front of the bag

A portable spill kit that comes in a durable see-through bag with shoulder strap. Designed for small spills of chemicals and hazardous liquids. Requires minimum storage space yet it contains all the sorbents needed to handle a small spill.



| Cat. No. | Pack qty |
|----------|----------|
| 15823730 | 1        |

Fisherbrand™

## Battery Acid Specialty Spill Kit

- Place near a battery swap station and around your facility
- Allows you to be prepared should a spill occur
- Designed to pick up battery acid on both smooth and rough surfaces
- Chemically inert

Spill kit designed to pick up battery acid on both smooth and rough surfaces while remaining chemically inert.



| Cat. No. | Pack qty |
|----------|----------|
| 16563852 | 1SET     |

Fisherbrand™

## Chemical Spill Kit, Absorption Capacity 16L

- Economy chemical spill kit
- Portable and easy to store
- High visibility, water-resistant bag keeps sorbents dry
- Light weight, ideal for carriers transporting small quantities of liquids

This economy portable spill kit comes in a high visibility, water-resistant, yellow PVC bag with handles. Designed for small spills of chemicals and hazardous liquids. Ideal for a small storage areas, such as behind or under a seat thanks to its compact size.



| Cat. No. | Pack qty |
|----------|----------|
| 15833730 | 1        |

3M™

## Chemical Spill Kit Dispenser

- Cleaning up hazardous chemical spills, drips, and leaks
- Suitable for use with most chemicals
- Promotes safety on the site
- Easily disposable

Ideal for rapid response to chemical spill containment and cleanup. 3M™ Chemical Spill Kit Dispenser contains 4 kits that include 2 Multi-Format sheets, Nitrile gloves, dustpan and brush, disposable bag and tie. Dispensers can be wall or shelf mounted for immediate access in areas where spills are likely to occur.



| Cat. No. | Pack qty |
|----------|----------|
| 12312469 | 4        |





Distribuito da Fisher Scientific. Contattaci subito:

**In Italy:**

Per ordinare online: [fishersci.it](https://fishersci.it)

Per inviare un ordine via fax, utilizzare 02 950 59 479

Per il servizio clienti, chiamare 02 950 59 478

 **fisher scientific**  
part of **Thermo Fisher Scientific**

© 2022 Thermo Fisher Scientific Inc. All rights reserved.  
Trademarks used are owned as indicated at [fishersci.com/trademarks](https://fishersci.com/trademarks).